

**51792, 54792
56792
11-12 INFINITI
QX56**



**51792, 54792
56792
11-12 INFINITI
QX56**

11-12 INFINITI QX56

Upper Class Mesh Grille

Install time: 45 Mins.

TOOLS REQUIRED:




Flat Screwdriver
Phillips Screwdriver

PARTS LIST:

(1) Mesh Grille
(4) Christmas Tree Clips
(4) Fender Flatwashers
(2) #10 Screws
(2) U-Nuts

**PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS
BEFORE ATTEMPTING INSTALLATION.**

- Remove 13 Clips and 4 Bolts from Across the Grille. (Fig. 1)
- Pull Factory Grille Forward Carefully on the Top Sides to Uncclip a Pressure Clip. (Fig. 2)
- Unclip Pressure Clips along the Bottom of the Factory Grille. (Fig. 3)
- Start Removing the Grille and Remove the Clip that Connects the Camera. (Fig. 4)
- Remove 2 Screws to Remove the Camera. (Fig. 5)
- Remove the Pressure Clip that is in the Factory Grille Shell where you Removed the Factory Grille shown in Fig. 2 and remove a Pressure Clip along the Bottom Side. (Fig. 6 & 7)
- Insert the Pressure Clips on the Thin Brackets on the Mesh Grille. (Fig. 8)

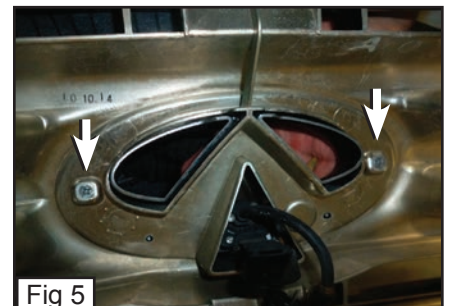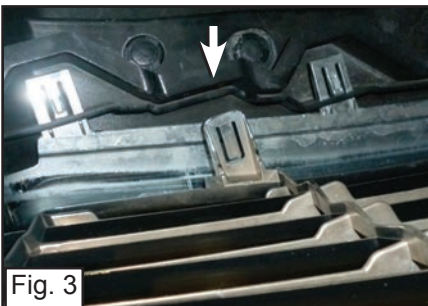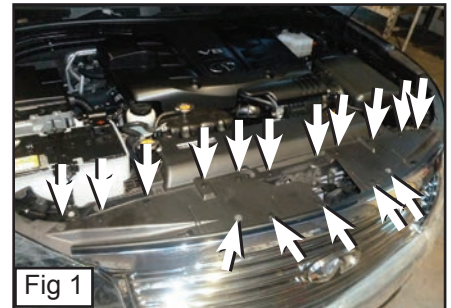

**51792, 54792
56792
11-12 INFINITI
QX56**



**51792, 54792
56792
11-12 INFINITI
QX56**

11-12 INFINITI QX56

Upper Class Mesh Grille

- Place the Logo Plate on the Mesh Grille and Insert the Camera, From Behind the Grille, Place a Washer and Thread back in the Factory Screws that Came on the Camera. (Fig. 9)
- Place the Mesh Grille on the Factory Grille Shell, Make Sure the Clips go in on the Top Side and Bottom of the Mesh Grille. (Fig. 10 & 11)
- Clip back in the Camera Wire.
- Insert the Christmas Tree Clips Through the Brackets along the Bottom of the Mesh Grille. (Fig. 12)
- Insert a U-Nut on the Bracket with the Hole that is along the top of the Mesh Grille and Place a Washer and #10 Screw on Top of the Brackets to secure the Grille. (Fig. 13)

INSTALLATION COMPLETE

