

51793, 54793

56793

11-12 INFINITI

QX56



51793, 54793

56793

11-12 INFINITI

QX56

11-12 INFINITI QX56

Upper Class Mesh Grille

Install time: 45 Mins.

TOOLS REQUIRED:

Flat Screwdriver
Phillips Screwdriver

PARTS LIST:

(1) Mesh Grille
(1) Logo Plate
(6) L-Brackets
(6) 6/32 Nylon Lock Nuts

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

- Remove 13 Clips and 4 Bolts from Across the Grille. (Fig. 1)
- Pull Factory Grille Forward Carefully on the Top Sides to Unclip a Pressure Clip. (Fig. 2)
- Unclip Pressure Clips along the Bottom of the Factory Grille. (Fig. 3)
- Start Removing the Grille and Remove the Clip that Connects the Camera. (Fig. 4)
- Remove 2 Screws to Remove the Camera. (Fig. 5)
- Place the Mesh Grille over the Factory Grille. (Fig. 6)
- Place the Logo Plate onto the Mesh Grille. (Fig. 7)
- Place the Camera Through the Logo Opening and Thread back in the Factory Screws. (Fig. 8)
- Place L-Brackets on the Threaded Studs that are on the Mesh Grille and Thread with provided 6/32 Nylon Lock Nuts. (Fig. 9)

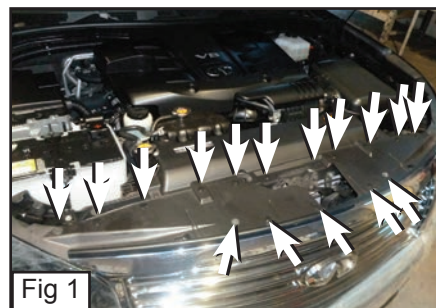


Fig 1

INSTALLATION COMPLETE



Fig 2

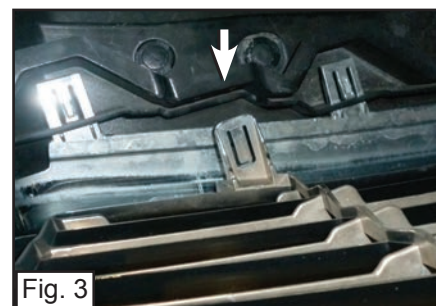


Fig. 3



Fig 4

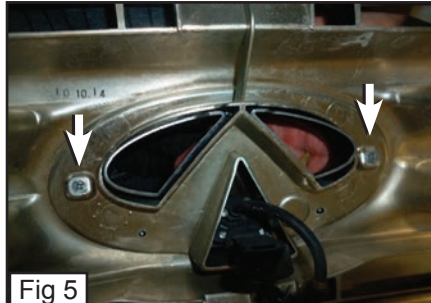


Fig 5



Fig 6



Fig 7



Fig 8

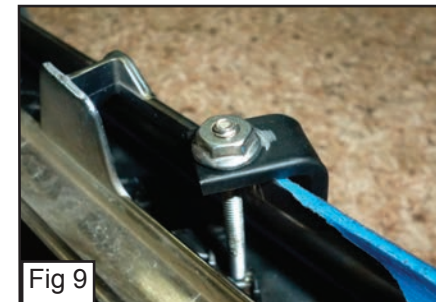


Fig 9