

51441 54441

11-13 DODGE CHARGER



51441 54441

11-13 DODGE CHARGER

11-13 DODGE CHARGER

Upper Class Mesh Grille Full Opening

TOOLS REQUIRED:

Flathead Screwdriver
Plastic Prybar
Socket & Ratchet Set

PARTS LIST

(4) 10/32 Nylon Lock Nuts (1) Mesh Grille
(4) Fender Flatwashers (4) Flange Brackets
(4) 6/32 Nylon Lock Nuts

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS
BEFORE ATTEMPTING INSTALLATION.

Step 1 Factory Grille Removal

Remove 2 Plastic Covers above the Factory Grille Shell. (Fig. 1)

Remove 4 Clips along the Factory Grille Shell. (Fig. 2)

Remove 2 Clips along the Fender. (Fig. 3)

Use a Plastic Prybar to separate the Fender Cover from Bumper Shell and remove (1) 10mm Bolt. (Fig. 4)

On each end, Clips secure the side bumper, Carefully pull the side bumper outward to release clips. (Fig. 5)





Remove 6 Bolts along the bottom of the Bumper Shell. (Fig. 6)

Remove factory grille and bumper (grille and bumper are connected together) (Fig. 7)

Step 2 Grille Removal

Remove 6 Screws from around the factory grille and 1 screw on the Bumper Support. (Fig. 8)

Remove Bumper Support. (Fig. 9)

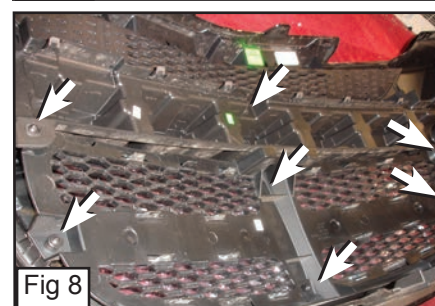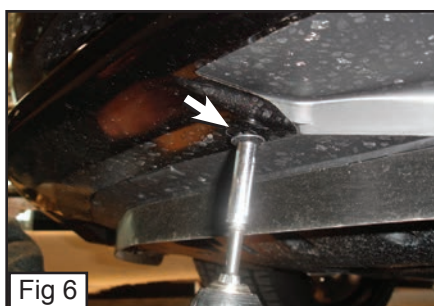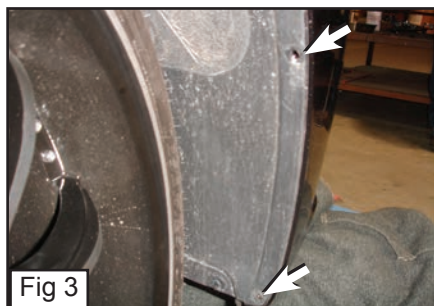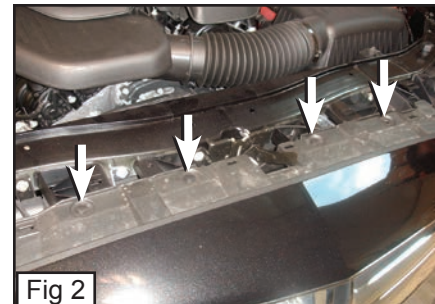

Continue on Page 2

51441

54441

11-13 DODGE CHARGER



51441

54441

11-13 DODGE CHARGER

11-13 DODGE CHARGER

Upper Class Mesh Grille Full Opening

Unclip 16 clips from around the Factory Grille. (Fig. 10)

Remove Factory Grille. (Fig. 11)

Unclip 8 Clips from around the OE Grille Shell and remove (OE Grille Shell will come out from front. (Fig. 12)

Unclip the Dodge Logo on the Factory Grille.

Step 3 Grille Installation

Place the Mesh Grille onto the Factory Shell. (Fig.13)

On the 4 Short Screws on the Mesh Grille, Insert Flange Brackets so it latches onto the Factory Grille Shell and thread a 6/32 Nylon Lock Nut in place. (Fig. 14 & 15)

Place back the Factory Grille Over the Mesh Grille. (Fig. 16)

Place 4 Fender Flatwashers Around the Threaded Screws on the Mesh Grille and Thread 10/32 Nylon Lock Nuts in Place. (Fig. 17)

Place back the Bumper Filler and re-install the 3 Screws along the bottom of the Factory Grille.

Re-Assemble Grille Shell, Bolts and Clips back in.



Fig 9



Fig 10



Fig 11

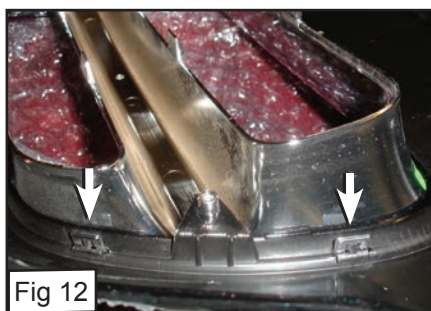


Fig 12



Fig 13

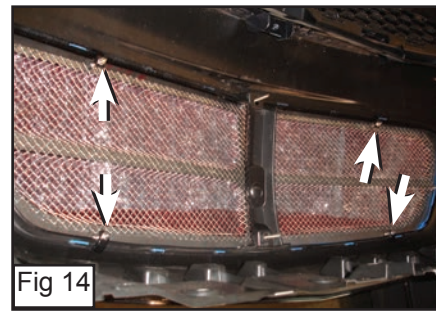


Fig 14

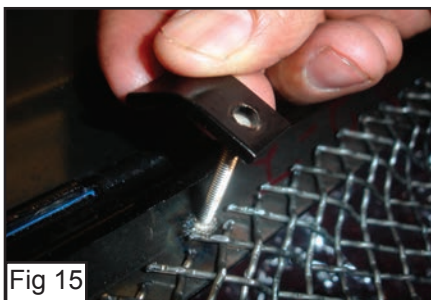


Fig 15



Fig 16



Fig 17

Installation Complete