

**06-08 DODGE RAM**  
**Upper Class Mesh Grille 2 Pc.**


**Recommended Tools:**

Flat / Slotted Screwdriver  
8mm Socket & Ratchet  
Vice Grips/File/Pliers

Drill/Philips Bit

**Parts List / Hardware:**




2 Mesh Inserts  
8 #8 X 3/4" Screws  
8 #8 Flat Nuts

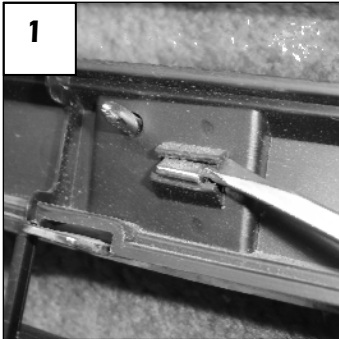

**STEP 1:** Read and understand all instructions before attempting the install of this grille. Be sure that the package of hardware matches the hardware list as listed above. Next, test fit the grille to the vehicles factory openings. You are now ready for the install:

**STEP2:** Remove six 8mm nuts from the top of the grille; then remove six 8mm bolts along the bottom. Separate the factory grille from vehicle and place it face down on a workbench.

The factory grille has two black or chrome plastic inserts held in place by molded tabs. Use a slotted screwdriver to separate the clips and remove the inserts (1). Using a cut off wheel, remove the cross bar leaving a 1/4" piece on both sides (2). Clean the cut area edges.

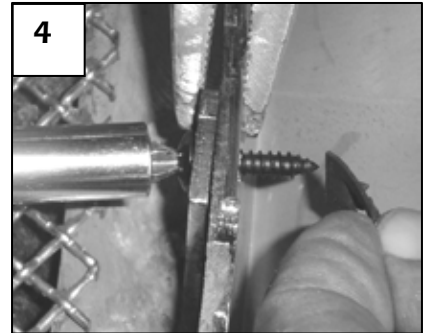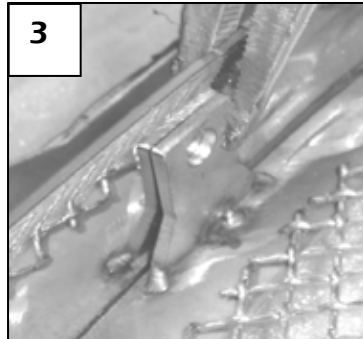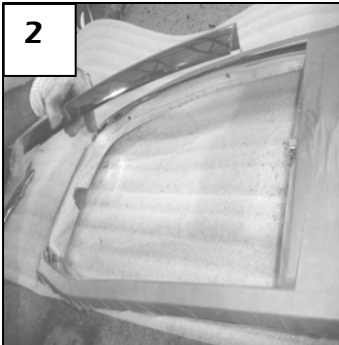

**STEP 3:** Center one of the new grilles into the factory grille shell. With the grille centered in the shell, flip the grille all as one piece onto a soft surface. Use vice grip pliers to secure the mounting tabs to the factory grille (3). Using a drill and drill bit, make a pilot hole through the grille shell at each bracket. From the center, place a screw through the bracket and grille shell into a flat nut (4). Repeat this process on all remaining brackets. Repeat the process on the other insert. Re-install the grille assembly onto the vehicle.