

54519

10-12 FORD MUSTANG GT



54519

10-12 FORD MUSTANG GT

10-12 FORD MUSTANG GT

Upper Class Main Grille w/ Logo Cutout - 3 PC.

TOOLS REQUIRED:

8mm Socket or Nut Driver
Flat Screwdriver
Drill Motor & 1/8" Bit

PARTS LIST:

(6) 6/32" Nylon Lock Nuts
(4) 1/2" L Brackets
(2) 10/32" Flat Washers
(1) Mesh Grille Kit (3 Pc.)

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE

INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquiries can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.



Step 1 Factory Grille Removal

First you will remove the top radiator cover from the vehicle. There are 8 plastic pop clips on the radiator cover that need to be removed with a flat screwdriver by prying the head upward (Fig 1). Now you can remove the radiator cover. Next you need to remove the factory grille. First remove the two 8mm bolts from the outside top corners of the factory grille (Fig 2). There are six plastic latches along the bottom backside of the factory grille that need to be unlatched, four of the latches are in the center part of the grille and two of the latches are on the outer sides of the grille. Use a flat screwdriver to pry the latches apart (Fig 3). With the latches unlatched, unplug the electrical connectors from the headlamps (Fig 4). Now you can remove the factory grille shell from the vehicle.



Fig 1

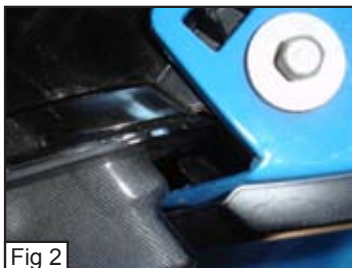


Fig 2



Fig 3



Fig 4

Step 2 Mesh Grille Installation

With the factory grille removed from the vehicle you can now install the mesh grilles. First place the larger center mesh grille into the factory grille center section. Turn over the factory grille with the mesh grille in it and place the four 1/2" L-Brackets over the threaded studs on the backside of the mesh grille, the L-Brackets will latch around the black plastic on the factory grille shell. Place the 6/32" nylon lock nuts over the L-Brackets and tighten to secure the grille (Fig 5). Now you will install the two small side grilles. Take the corresponding grille that fits the corresponding side and place it in the opening of the factory grille, you will need to make a mark where the threaded stud on the mesh grille contacts the factory grille so you can drill a 1/8" hole for the stud to go through (Fig 6). Drill a 1/8" hole on the mark (Fig 7). Insert the grille into the opening and the threaded stud through the hole that was drilled, install the 10/32" flat washer and 6/32" nylon lock nut on the threaded stud and tighten (Fig 8). Repeat on other grille. Installation complete.



Fig 5



Fig 6



Fig 7



Fig 8