

54709

06-08 HONDA

PILOT



54709

06-08 HONDA

PILOT

06-08 HONDA PILOT **UPPER CLASS SERIES MESH GRILLE**

Tools Required:

Phillip Screwdriver (std. & short length)
Slotted Screwdriver
Drill & 1/8" Drill Bit
10mm Socket
Die Grinder / File

Hardware / Parts Included:

1 Upper Class Mesh Grille
8 #8 x 3/4 Philips Screws
8 #8 Flat Nuts

Read and understand instructions before attempting installation



Step 1

Remove the fasteners holding the radiator cover and grille corners in place (1); remove the cover. Remove the bolts securing the bumper cover to the core support (located near the radiator mounts). Pull the bumper cover forward; remove the nine small plastic fasteners (Phillips screws) securing the grille. Now unfasten the molded clips and separate the grille.


If a bumper grille is going to be installed; install at this time and then proceed to Step 2.



Step 2

Test fit the mesh grille over the factory grille. Use a marker to note the mounting tab locations to the factory grille.

Use a die grinder to cut the center cross bars securing the Honda logo (2). Make your cut behind the necessary mounting tab area.

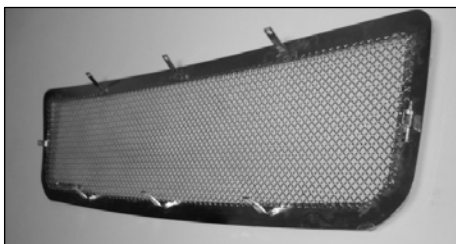

Step 3

Center the grille in place; drill 1/8" holes at each mounting tab. Use the #8 screws and flat nuts to secure the mesh grille. Re-install the grille assembly and radiator cover onto the vehicle. ***Thank you for purchasing a T-Rex Billet Grille. 5/8/07***