



54728

2008 HONDA
ACCORD

54728

2008 HONDA
ACCORD

2008 HONDA ACCORD SEDAN
UPPER CLASS MESH – 1 PC

Tools Required:

Philips/Flathead Screw driver
5/16 Socket or Wrench

Hardware / Parts Included:




1	Upper Class Mesh Grille	2	#10 Washers
4	1/8" Fender Washers	2	#8 U Nuts
4	6-32 Nylon Lock Nuts		
2	#8 Screws		

Read and understand instructions before attempting installation

Step 1

Remove the plastic fasteners holding the motor cover in place. Remove the Plastic grille insert from the bumper by releasing the clip on the perimeter of the grille.

IF YOU PURCHASED THE LOWER GRILLE, INSTALL NOW!

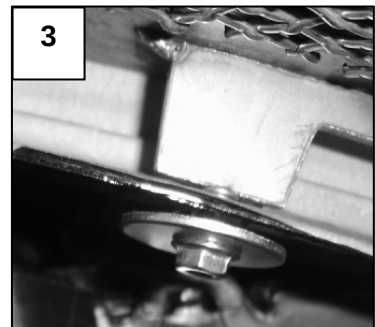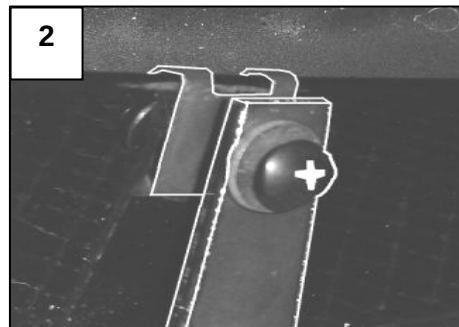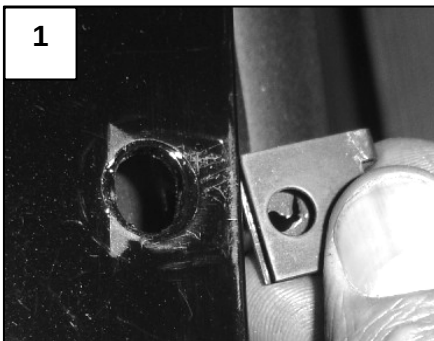

Place the provided U-Nuts on the top bumper cover holes (1). These align with the tabs on the bottom of the new grille. Center the new grille into the grille opening. Align the side studs into the factory bumper tabs (2). On the lower tabs; place a washer on each screw and place through the grille bracket and into the U nut. On the side studs; place a fender washer and nylon lock nut on each stud (3). Making sure that the grille is centered, tighten all hardware securing the grille to the vehicle.

Step 2

Replace the upper motor cover using the factory clips. The two front center clips will line up with the upper grille mounts. Enjoy your new grille.

Thank you for purchasing a T-Rex Billet Grille. 04/07/08