

54741
05-06 NISSAN
ALTIMA



54741
05-06 NISSAN
ALTIMA

05-06 NISSAN ALTIMA
UPPER CLASS MESH GRILLE

Tools Required:

Small Slotted Screwdriver
10mm Socket or Nut Driver
8mm Socket or Nut Driver

Part List:


1	Mesh Grille	1	Top Plate
4	1/2" L Brackets		
8	6/32 Nylon Lock Nuts		
4	# 10 Washers		

Read and understand instructions before attempting installation

Step 1.

Remove the factory grille shell; use a small screwdriver to pull the center from each fastener on top of factory grille. Two of the fasteners will be re-used; do not discard the fasteners. Next, lightly pull the top of the grille assembly forward. Use your fingers to depress the molded clips along the bottom of the grille. The grille can now be removed. Remove the two 10mm bolts from the radiator supports to core support.

If you purchased the lower grille install now

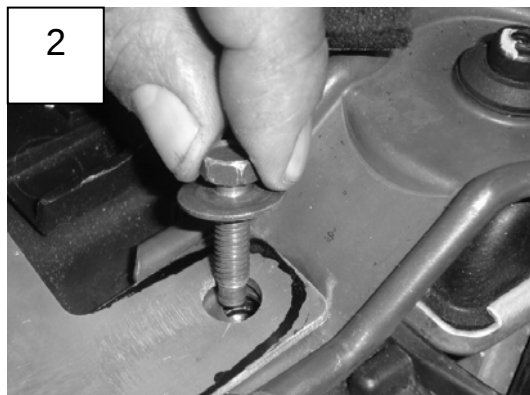

Step 2.

Assemble the top plate to the grille using the nylon nuts and washers. Make sure the top of the plate is flush to the top of grille. Center the mesh insert into the opening. The lower studs align with the factory mounting holes. Slide these studs into the mounting holes. Use the L brackets and a 6/32 nylon nuts to secure the lower mounting brackets.(1) Use the factory 10mm bolts in the radiator mounts (2). These bolts align into the factory holes. Using two factory clips; place them into the holes onto the top plate.

Thank you for purchasing a T-Rex Billet Grille. 8/01/07