

54762
07-09 NISSAN
ALTIMA



54762
07-09 NISSAN
ALTIMA

2007-09 NISSAN ALTIMA
UPPER CLASS SERIES MESH GRILLE

Tools Required:

Slotted Screwdriver
5/16" Wrench
Pliers


Part List:

1 Mesh Grille	2 Molding Clips (19519 or 20268)
4 6-32 Nylon Lock Nuts	1 Top Mounting Plate
4 #10 Washers	

Read and understand instructions before attempting installation

Step 1.

Remove the factory grille shell; use a small screwdriver to pull the center from six fasteners along the top of the grille and bumper cover (these are needed to install the new mesh grille). Next, lightly pull the top of the grille assembly forward; use a slotted screwdriver to depress the clips on each end of the grille. Use your fingers to depress the molded clips along the bottom of the grille; remove the grille. If a bumper grille has been purchased, install at this time.

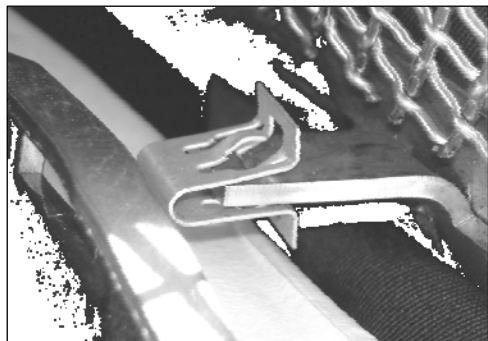

Step 2.

Attach the top mounting plate to the grille; install so the part number can be read on top. Use the washers and nuts to secure the plate. Install the two molding clips onto the lower mounting tabs as shown (left).

Step 3.

Center the grille into the opening. The lower mounting tabs align with two of the factory mounting holes; slide in place. The new grille should install with minimal gap along the bottom (approximately 1/16"). It may be necessary to slightly bend the lower mounting tabs with a pair of pliers. The top mounting plate aligns with the factory holes. Use the factory fasteners to secure the plate.



Step 4.

Slowly close the hood making sure the grille does not interfere with the hood. Remove the grille and adjust if needed. ***Thank you for purchasing a T-Rex Billet Grille. 1/25/07***