



54921
07-08 TOYOTA
CAMRY

54921
07-08 TOYOTA
CAMRY

2007-08 TOYOTA CAMRY
UPPER CLASS SERIES MESH GRILLE

Tools Required:

Phillips / Slotted Screwdrivers
7mm, 8mm & 10mm Socket or Nut Driver

Part List:

1	Upper Class Series Grille	8	6-32 Flange Nuts
1	#10 x 1 Screw / #10 Flat Nut	5	#6 Flat Washers
1	Short Extension Bracket	2	½ x ½ L Brackets

Read and understand instructions before attempting installation

Step 1.


Remove the factory grille. Use a small screwdriver to pop the center from the plastic fasteners along the top; now remove the 10mm bolts and Phillips hood stops. Next, lightly pull the top of the grille assembly forward and remove the sheet metal cross-bar. Remove the screws behind the grille. Depress the molded clips around the grille by hand or with a screwdriver. Remove the grille. If a bumper grille has been purchased, install at this time (this allows more access), then proceed to Step 2.

Step 2.

The short extension bracket attaches to the inner lip (inside grille opening). It secures the center mounting stud to the bumper cover. Use the screw and flat nut to secure in place.

Step 3.

With the flange side up, thread a nut about half way onto the center and corner studs. Center the grille into the opening. The lower mounting brackets align into the factory holes; snap in place. The grille mounts slightly recessed into the opening. Adjust the flange nuts so the grille sits even on both ends. Secure the center and corner studs with a washer and flange nut. Install the L shaped brackets, washers and nuts onto the remaining studs.

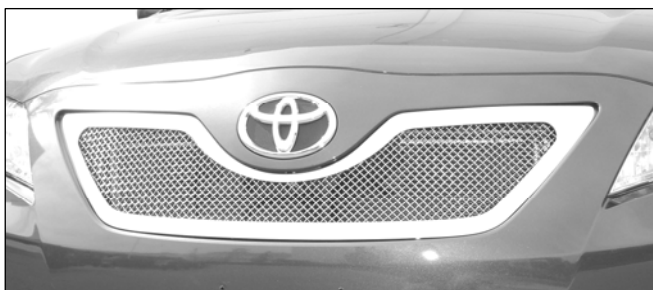

Step 4.

Re-install the cross-bar and secure the bumper cover.

Thank you for purchasing a T-Rex Billet Grille.
8/9/06