



55166

**05-08 CHEVY
CORVETTE**

55166

**05-08 CHEVY
CORVETTE**

UPPER CLASS SERIES BUMPER

Recommended Tools:

Phillips Screwdriver
Drill & 1/8" Drill Bit
Die Grinder or Jig-Saw (Optional)


Parts List / Hardware:

1	Upper Class Insert	3	1" (Half) Flange Brackets
6	6-32 Nylon Lock Nuts	3	½ 'L' Brackets
6	#10 Flat Washers		

Read and understand instructions before attempting installation

Step 1

Remove the fasteners securing lower splash shield to the bumper. This will allow access behind the bumper opening.

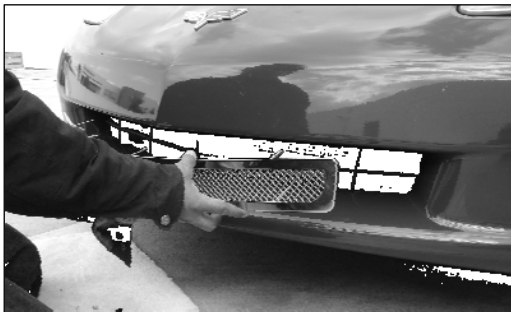

Step 2

Place the grille into the factory bumper opening. Install the ½ x ½ L brackets along the top; install the flange brackets on the bottom. Wrap the brackets around the bumper opening and tighten the hardware. Re-install the lower splash shield. ***Thank you for purchasing a T-Rex Billet Grille. 6/15/07***

