

55295
08-09 H2
HUMMER



55295
08-09 H2
HUMMER

1 PC UPPER CLASS SERIES BUMPER
2008-09 HUMMER H2 SUV & SUT


Recommended Tools:

5/16" Wrench or Nut Driver
Slotted Screwdrivers

Parts List / Hardware:

- 1 Bumper Inserts
- 2 6-32 Nylon Lock Nuts
- 2 1/8" Fender Washer

Read and understand instructions before attempting installation

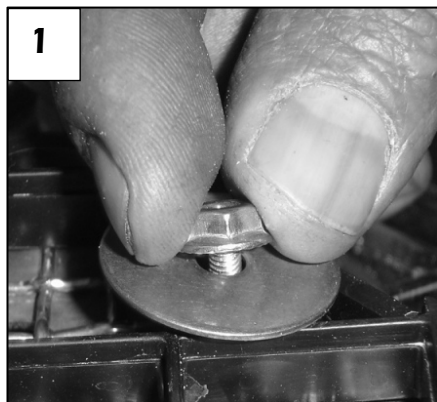

Step 1

Open the hood and remove the grille. Place the grille face up on a work-table. Apply masking tape to the grille.

Step 2

Center the grille into the bumper opening. Place a fender washer and nylon lock nuts on each stud. Center the grille and tighten (1). Do not over tighten.



Step 3

Re-install the factory grille assembly onto the vehicle.

Thank you for purchasing your T-Rex billet grille.

12/17/07