

55563
08-10 FORD
SUPER DUTY



55563
08-10 FORD
SUPER DUTY

1 PC BUMPER GRILLE

Recommended Tools:

10mm Wrench or Nut Driver
Slotted Screwdriver



Parts List / Hardware:

1	Mesh Bumper Grille	2	Custom Brackets
2	1/4" Nuts		
2	1/4" X 1" Bolts		
2	1/4" Lock Washers		
2	1/4" Flat Washers		

Read and understand instructions before attempting installation

Step 1

Remove the license plate and plate mount from bumper. Remove the plastic clips on lower plastic protector between the grille and radiator (1). (Remove only the two on each side of center clip) Place the custom brackets along with the bolts and washers (2) into the holes in which you removed the clips. From the backside of the bumper, place the mesh into the center of the bumper. Rotate the brackets to support the mesh into place. Make sure that the grille is centered and tighten the hardware

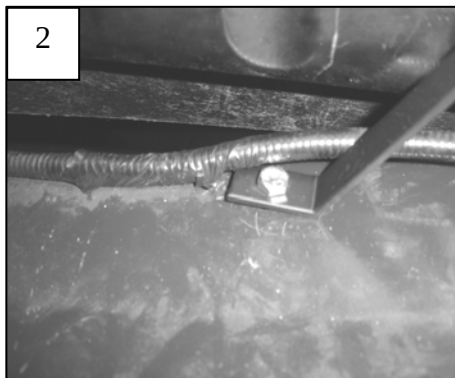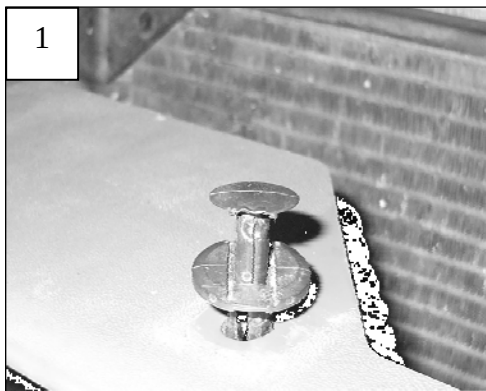

Thank you for purchasing your T-REX grille. 12/11/07