



55662

06-08 FORD
EXPLORER SPORT

55662

06-08 FORD
EXPLORER SPORT

2006-08 FORD EXPLORER SPORT
MESH BUMPER INSERT


Tools Required:

Phillips / Slotted Screw Drivers
Standard Wrench and Socket Set

Parts List:


- 1 Mesh Insert
- 4 1/4" x 1" Bolts
- 4 1/4" Flat Washers
- 4 1/4" Lock Washers
- 4 1/4" Nuts

Read and understand instructions before attempting installation

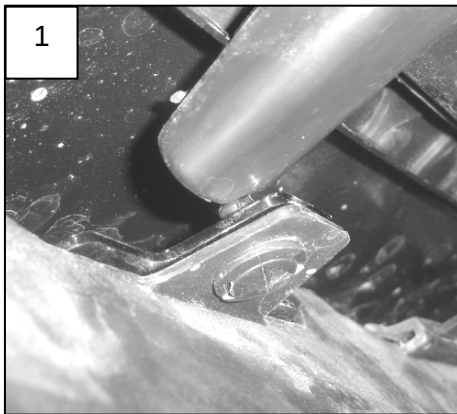

Step 1

Open the hood and remove the plastic retainers holding the lower motor cover to the bumper (1). This will allow access to the backside of the bumper for the grille install.

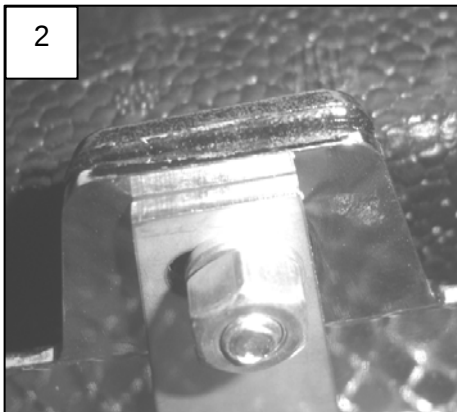

Step 2

Center the mesh insert into the bumper opening. From the backside of the bumper; place a flat washer on the provided bolts. There are plastic tabs that line up with the tabs welded to the grille. Place the bolt through both tabs from the top down. Place a lock washer and nut on each bolt (2). Tighten the hardware till snug. Do not over-tighten the hardware.

Step 3

Place the factory motor cover into the factory location. Re-install the factory plastic retainers.

Thank you for purchasing a T-Rex billet grille. 7/17/07