

09-11 LINCOLN MKS

Upper Class Mesh Bumper

TOOLS REQUIRED:

Phillips & Flat Screwdrivers
Socket and Ratchet Set
Die Grinder

PARTS LIST

(6) 6/32" Nylon Lock Nuts
(6) 135 Brackets
(1) Mesh Grilles

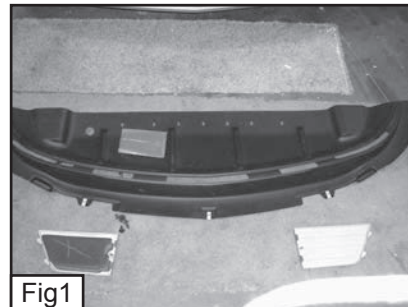


Fig1

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquiries can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.

Step 1 Lower Cover Removal

Remove the factory lower cover from beneath the front of the vehicle. There are 5 bolts and 7 plastic pop clips. (Fig 1) This will give you access to the backside of the bumper grill area. Remove the 2 plastic covers on the lower front of the factory bumper by unlatching them from the backside. (Fig 2)



Fig 2

Step 2 Bumper Mesh Grille Installation

You will need to remove the plastic bars in the factory bumper opening. You can use a hacksaw blade, grinding wheel etc. Leave approx 1/4" of the bar. (Fig 3) Take the mesh grille and insert it into the factory bumper opening. (Fig 4) From the backside of the grille, take the six 135 brackets and install them onto the threaded studs that are on the mesh grille. Make sure they latch over the factory bumper opening and install the 6/32" nylon lock nuts and tighten. (Fig 5) Reinstall the 2 plastic covers on the front lower bumper area and the lower cover from underneath the vehicle. Installation complete.

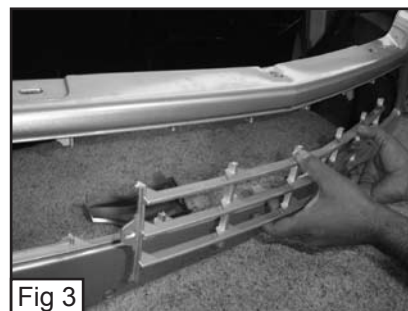


Fig 3



Fig 4

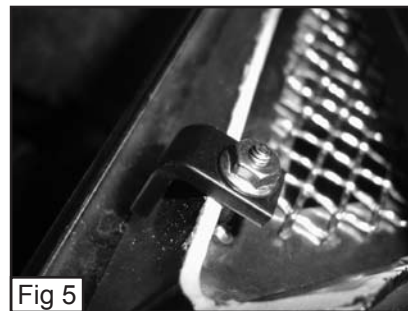


Fig 5