

T-REX

Billet Grilles

55722

**2008 INFINITI
M SERIES**

55722

**2008 INFINITI
M SERIES**

BUMPER MESH INSERT

Tools Required:

Phillip/ Slotted Screwdriver
Needle Nose Pliers
8mm Socket


Hardware / Parts List:

1 Bumper Insert
4 1/8" Fender Washers
4 6-32 Nylon Lock Nuts

Read and understand instructions before attempting installation

Step 1

Remove the factory grille shell; use a small screwdriver to pull the center from four fasteners along the top. The fasteners will be re-used; do not discard. Lightly pull the top of the grille assembly forward. Use a screwdriver to depress two clips (one in each corner; top). Depress the molded clips along the bottom. Use a slotted screwdriver to pry two remaining detents (one in each corner; bottom). The grille can now be removed.

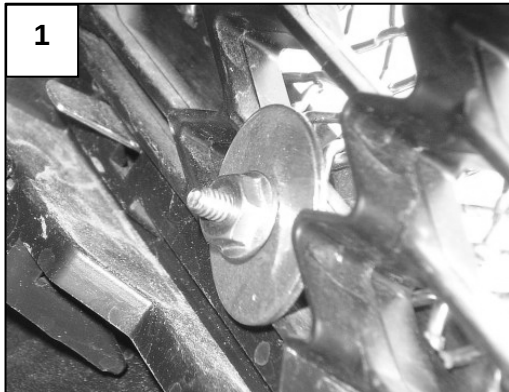

Step 2

Center the mesh bumper insert into the opening. From the backside of the grille; place a fender washer and a nylon lock nut on each stud **(1)**. Making sure that the grille is straight; tighten all the hardware. Reinstall the grille to the vehicle.

Thank you for purchasing your T-Rex billet grille.

5/5/08