

55762
07-09 NISSAN
ALTIMA



55762
07-09 NISSAN
ALTIMA

2007-09 NISSAN ALTIMA
UPPER CLASS SERIES MESH BUMPER

Tools Required:

Slotted Screwdriver
5/16" Wrench

Part List:

1	Mesh Bumper Grille	3	½" x ½" L Bracket
6	6-32 Nylon Lock Nuts	3	1.5" J Hooks
6	#10 Washers		



Read and understand instructions before attempting installation

Step 1.

Remove the factory grille shell to access the rear of the bumper; use a small screwdriver to pull the center from six fasteners along the top of the grille and bumper cover (these are needed to install the new mesh grille). Next, lightly pull the top of the grille assembly forward; use a slotted screwdriver to depress the clips on each end of the grille. Use your fingers to depress the molded clips along the bottom of the grille; remove the grille.

Step 2.

Center the grille into the bumper opening. Install the longer J hooks along the top (1) and the shorter L brackets along the bottom (2). Secure the brackets using the nuts and washers supplied. Wrap the brackets around the upper and lower edge of the bumper opening (1 & 2). Tighten the hardware until the grille is held in place.

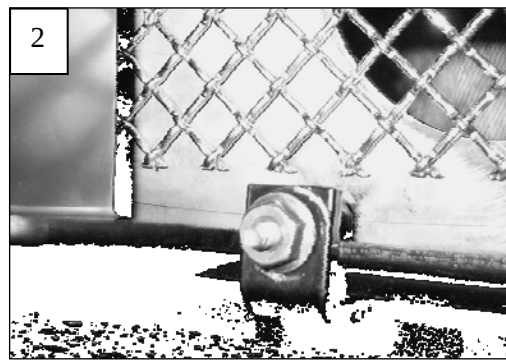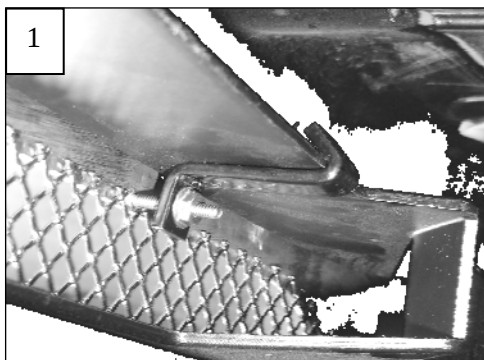

Step 3.

Re-install the upper grille onto the vehicle. *Thank you for purchasing a T-Rex Billet Grille. 1/25/07*