

T-REX

Billet Grilles

55799

06-07 INFINITI
G-35 SEDAN

55799

06-07 INFINITI
G-35 SEDAN

2006-07 INFINITI G-35 SEDAN

UPPER CLASS SERIES – 2 PC BUMPER

Tools Required:

Small Slotted Screwdriver
5/16 Wrench
Pliers
7MM Socket


Part List:

2 Upper Class Series Bumper (Right & Left)
8 6-32 Nylon Lock Nuts
8 #6 Flat Washers
8 2" Flange Brackets

Read and understand instructions before attempting installation

Step 1.

Remove the factory grille shell; use a small screwdriver to pull the center from each fastener. The fasteners will be re-used; do not discard the fasteners. Next, lightly pull the top of the grille assembly forward. There is one clip in each corner of the factory grille. Depress each clip by hand or with a screwdriver. Use your fingers to depress the molded clips along the bottom of the grille. The grille can now be removed.

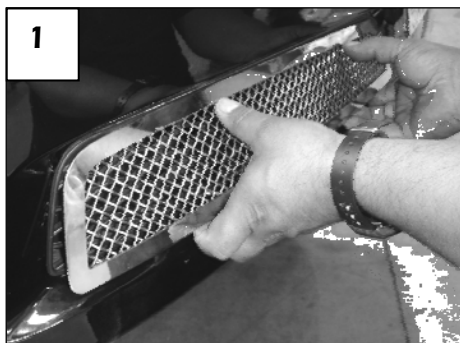

Step 2.

Remove the 7mm bolts along the bottom of the bumper cover. This will allow additional access to the back of the bumper.

Step 3.

Center the grille into the opening (1). Slide the upper mounting studs in first, then the bottom. Install the flange brackets on the mounting studs (2); secure the grille using the nuts and washers.



If necessary, remove and adjust the brackets. Re-install the grille and lower splash shield. Repeat installation on the remaining grille.

Thank you for purchasing a T-Rex Billet Grille. 5/8/07