

55810

**08-12 INFINITI
G-37 SEDAN**



55810

**08-12 INFINITI
G-37 SEDAN**

UPPER CLASS SERIES MESH BUMPER – 1 PC


Tools Required:

Phillip / Slotted Screwdrivers
5/16 Socket, 10mm Socket

Hardware / Parts List:

- 1 Mesh Bumper (Center)
- 4 ¼" Flat Washers
- 4 6-32 Nylon Lock Nuts


Read and understand instructions before attempting installation

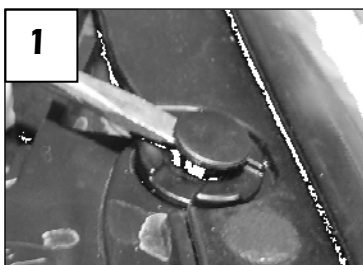

Step 1


The upper grille must be removed to install the bumper grilles.

Identify the correct locations for the three grilles. Remove six plastic fasteners along the top of the grille; use a small screwdriver to pull the center from each fastener (1). Remove five 10mm bolts securing the radiator cover.

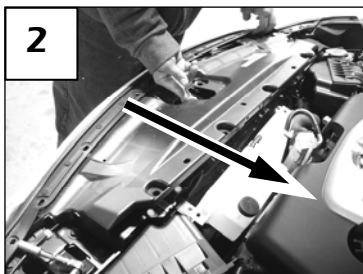

Remove two 10mm bolts securing the coolant overflow tank; slide it back for clearance (2). Next, push the radiator cover back; depress the clips securing a wiring harness to the cover, remove (2).

Remove five 10mm nuts behind the grille. Depress the molded clips retaining the grille and remove from the front.

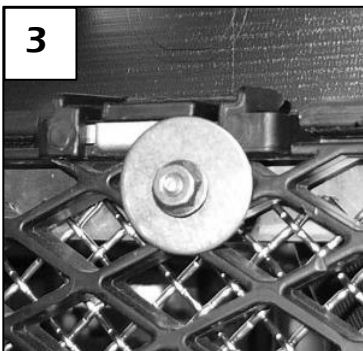

Step 2

Place the center grille into the bumper opening. Install the ¼" washers and nuts to secure the grille (3). Tighten the hardware until the grille is held securely in place. ***Thank you for purchasing your T-Rex grille.***

11/28/07