



55902

**2008 TOYOTA
SEQUOIA**

55902

**2008 TOYOTA
SEQUOIA**

1pc BUMPER INSERT

Recommended Tools:

Phillips Screw Drivers
8mm Wrench or Nut Driver


Parts List / Hardware:

1 Billet Insert
6 1/2" X 1/2" L Bracket
6 6/32 Nylon Lock Nuts

Read and understand instructions before attempting installation

Step 1

Insert the new mesh grille into the factory bumper opening (1). From behind the bumper; install an L-bracket and Nylon Lock Nut on each stud (2). Making sure that the grille is centered; tighten the hardware.

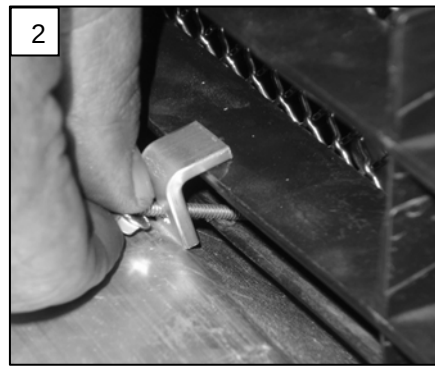

Thank you for purchasing your T-Rex grille. 03-27-08