

6452061

07-10 GMC
2500HD/3500



6452061

07-10 GMC
2500HD/3500

2007-2010 GMC SIERRA 2500HD/3500

Baja Bars

Install time: 15 Mins.

TOOLS REQUIRED:

Rubber Mallet
Socketwrench

PARTS LIST:

(2) Baja Bars
(4) 10/32 Nylon Lock Nuts
(4) 1/4 Lock Washers
(4) Plastic Covers

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS
BEFORE ATTEMPTING INSTALLATION.

Step 1 Stud Removal

• Decide where you would like to place the bars, then with a Plastic Mallet, Remove the Rivet from the Backside. (Fig. 1)

Step 2 Bar INSTALLATION

- Place the Plastic Covers onto the Threaded Studs on the Baja Bar. (Fig. 2)
- Place Baja Bar onto the opening holes where you removed the rivets. (Fig 3)
- Place a Fender Flatwasher and Nylon Lock Nut on the Threaded Stud. (Fig. 4)

INSTALLATION COMPLETE



Fig 1

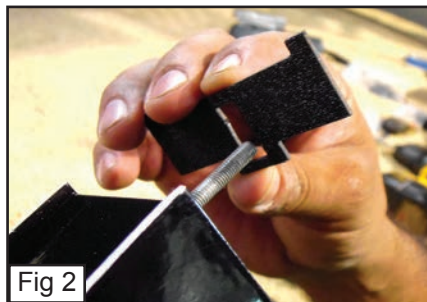


Fig 2

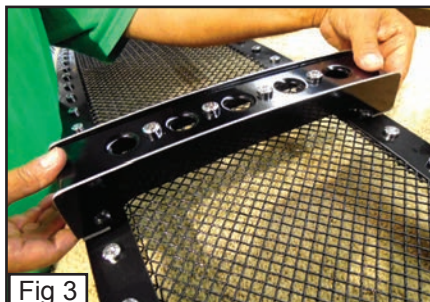


Fig 3



Fig 4