



19-390 Conversion Kit Installation Instructions


1. Remove the bulkhead nut from the outlet fitting.




2. Pull bulkhead fitting out of flange, loosen clamp and separate supply hose from fitting.



3. Insert barb on returnless assembly into the supply hose and tighten clamp to 8 in-lbs.

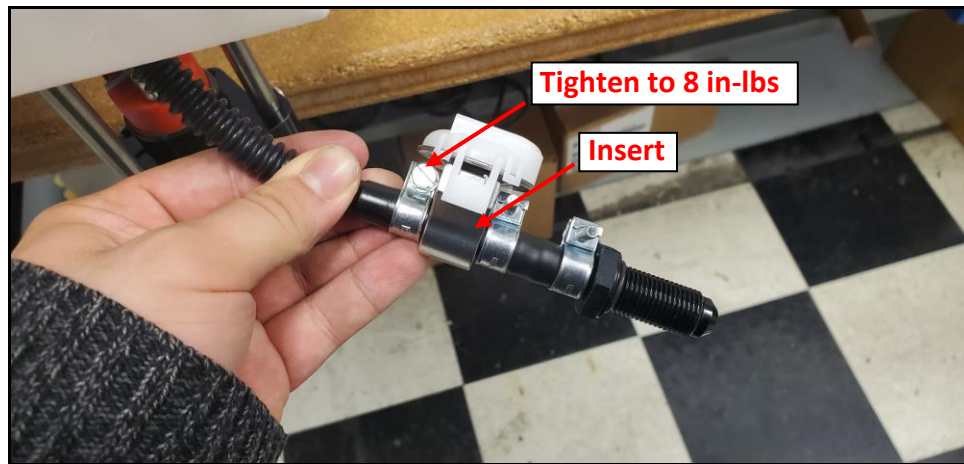

4. Insert new bulkhead from returnless assembly into flange.

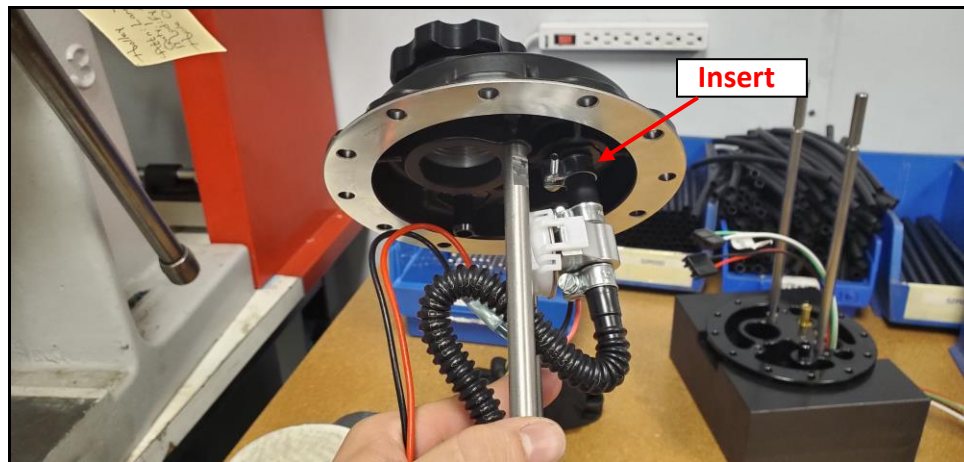

5. Tighten bulkhead nut onto the fitting inserted in step 4 and tighten to 150 – 195 in-lbs.

