

INSTALLATION INSTRUCTIONS FOR CHOKE DELAY KIT P/N 45-267 (85R6161)

1. Remove the ground wire from the choke cap. The positive lead should not have to be disconnected for this installation.
2. Remove the three choke cap assembly (See Fig. 1).
3. Remove the choke gasket, and install the piece of shrink tubing over the choke tang (See NOTE in line #4 and Fig. 2).

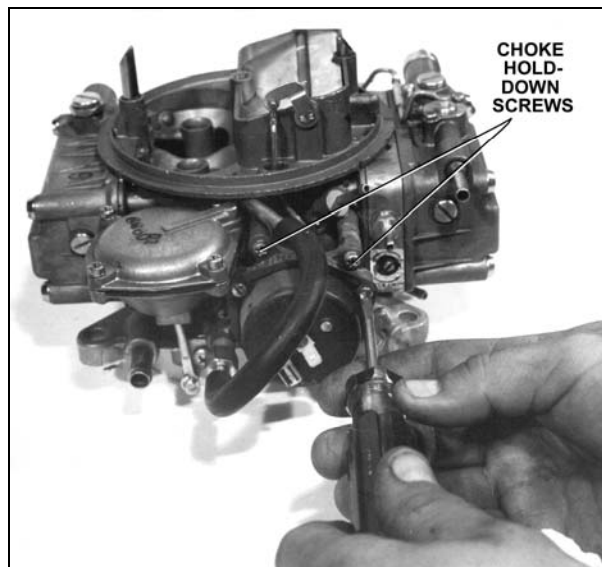


Figure 1

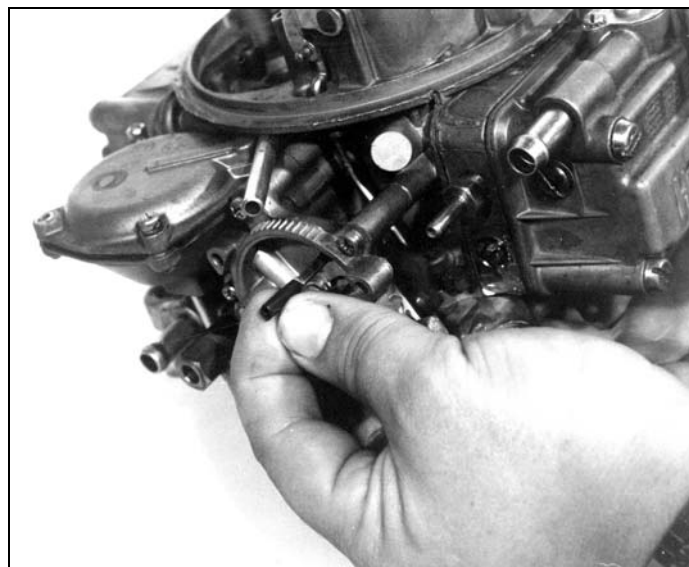


Figure 2

4. Using a soldering gun, heat the choke tang lever, until the shrink tubing is drawn tight against the tang (See Fig. 3). NOTE: For those choke units that contain a double tang, an additional piece of heat shrink tubing of a larger diameter is supplied. Use the correct tubing size for each tang.
5. Being careful to align the tang through the choke cap, carefully reinstall the choke cap and gasket assembly. Set the choke cap at index.
6. Connect the thermister wire to the (-) ground lead on the choke cap. Bolt the thermister to the intake manifold (See Fig. 4).
7. Before starting the engine, check for binding or sticking linkage.

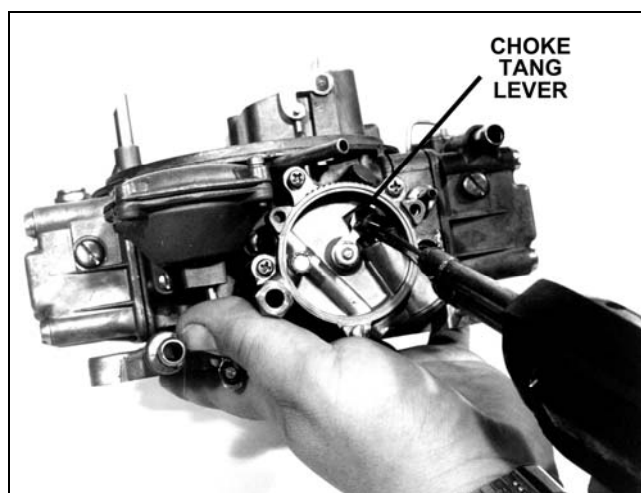


Figure 3

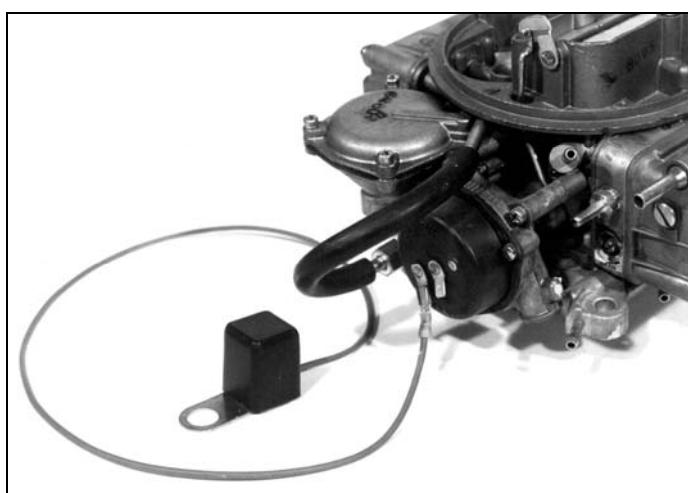


Figure 4