

20101 Handle Bar Braces Installation Instructions



Thank you for your purchase of this Hotchkis Performance product. Your Front Sub-Frame Brace set was designed with the performance and durability you've come to expect from Hotchkis Performance.

Note: Please read the entire installation instructions before starting. Having the right tools will ensure a smooth install process.

HANDLE BAR BRACE INSTALLATION

1. Loosen the top A-arm nuts.

Note: Do not completely remove the A-arm nuts and bolts yet.



2. Jack the car up just enough to relieve the A-arm of the weight of the car.

NOTE: The A-arm should now be free to move slightly around the two bolts.


3. Now completely remove the A-arm nuts and bolts.

4. Remove the bolt that fastens the fender to the firewall. This bolt can be discarded. A new bolt is provided in your kit.




**FENDER/FIREWALL
BOLT**

5. Put the Handle Bar Brace in place by inserting the bracket in between the A-arm and the frame of the car.

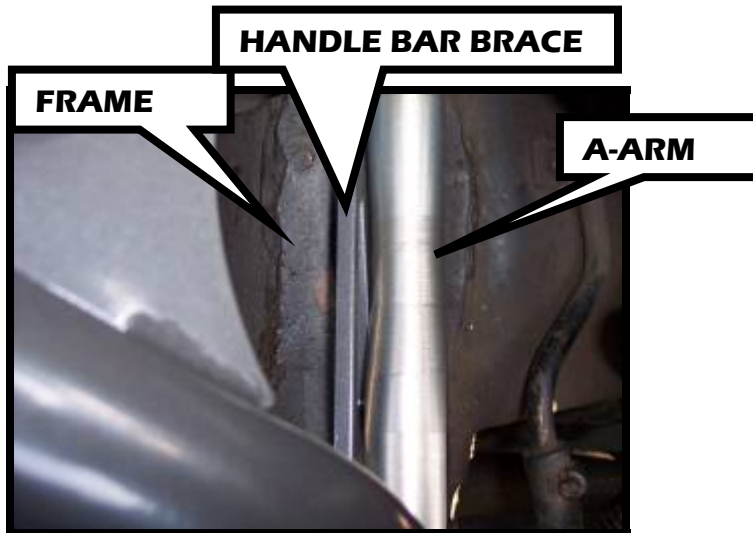

6. Put the A-arm bolts back into place, making sure they pass through the Handle Bar Brace bracket. Using the hardware provided, bolt the Brace to the fender/firewall hole.


NOTE: Do not completely tighten the bolts yet. This will make it easier to install the cross member.

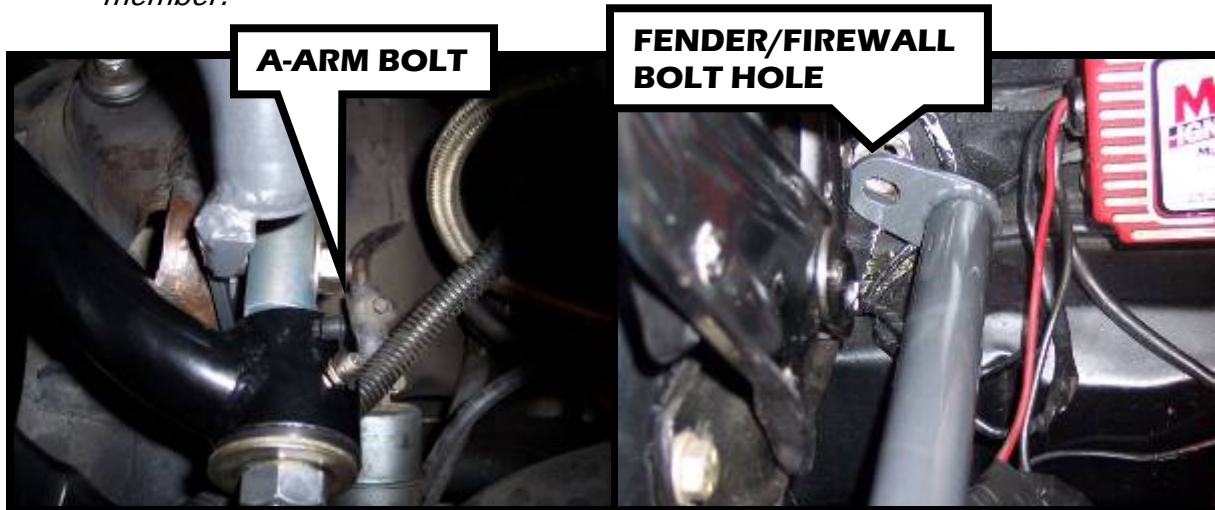

7. Using the same steps above install the other Handle Bar Brace on the opposite side.

8. Install the cross member by using the hardware provided and bolting it to each brace on the cross member bracket. The cross member can be completely tightened.

NOTE: Be sure to use the washer provided on the cross member bolt.

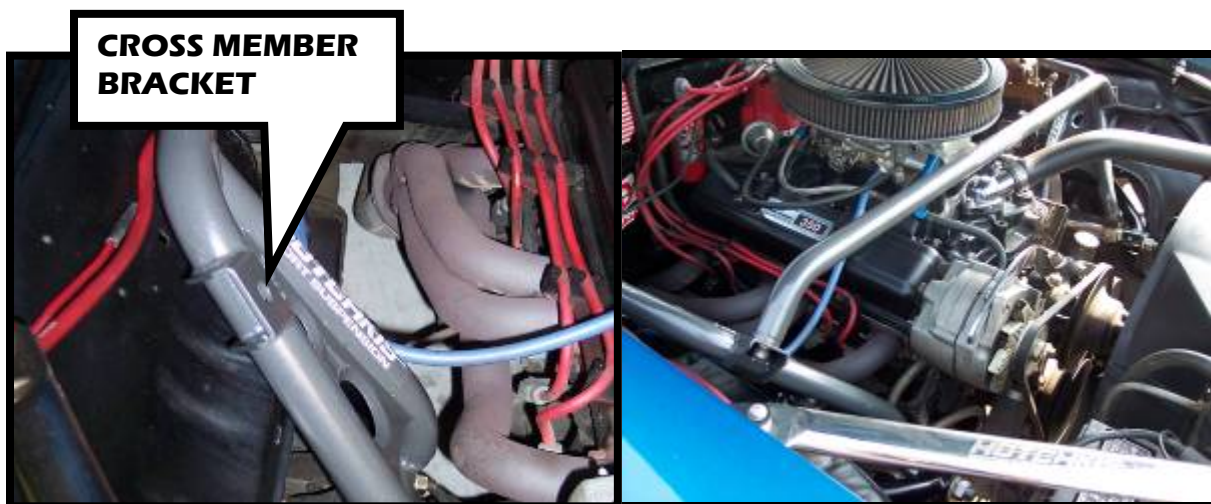

9. Now tighten the fender/firewall bracket end first and then tighten the A-arm bracket. Your Handle Bar Brace system is now ready to go.

