


Club Car Golf Cart Instructions (1992-2004)


For Part Number's 1129200120, 1129200020



Step 1

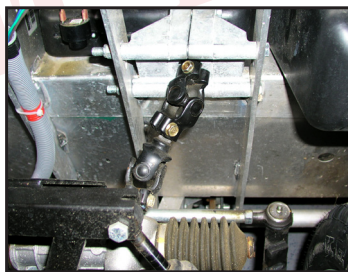


Step 2

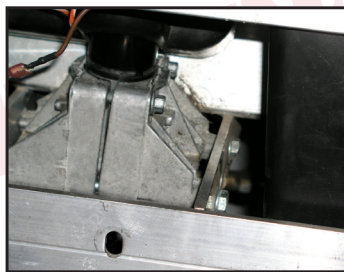

Step 3



Step 4

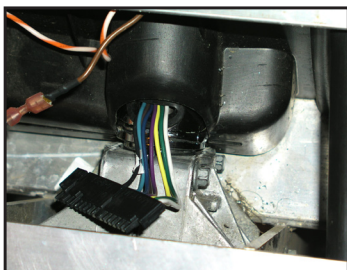

Step 5



Step 6



Step 7



Step 8

Step 1 - Remove the front cowl.

Step 2 - Remove the upper u-joint bolt. The new ididit column will use the original u-joint.

Step 3 - Loosen the four lower column support bolts and remove the old column.

Step 4 - Loosen the dash and tilt it forward to allow for greater clearance for the wiring on the new ididit column.

Step 5 - Slide the column into the lower column support. The wires should exit the column at the 12 o'clock position.

Step 6 - Attach the original u-joint to the column. Be sure to retighten the u-joint block and the column support bolts.

Step 7 - Install the knobs and levers that were provided with the Dress-up Kit.

Step 8 - Use a 9-bolt ididit steering wheel adaptor to bolt your favorite aftermarket steering wheel to your new ididit Golf Cart Column. **Please note:** The top shaft is the same size as a 1969 or newer GM passenger car.



www.ididitinc.com

ididit inc. 610 S. Maumee St. 49286 Tecumseh, MI PH: 517-424-0577 FAX: 517-424-7293