


Jegster Bolt On Four Link Track Rod Kit • 550-40018

• Bolt the track rod brackets to the frame brackets and to the housing brackets with the same bolts that attach the link ends to the brackets. The bolts must be installed with the bolt heads inside the "U" shaped track rod bracket and the nuts to the outside. The track rod itself is supplied oversized and has only one end welded to allow for fitting to almost any width frame. Trim the unwelded end of the track rod tube so that when the insert is welded in place and the rod assembled the suspension will be centered.

• If the suspension links are adjusted to another hole in the frame brackets or the housing brackets, the track rod bracket will be moved to that hole also.

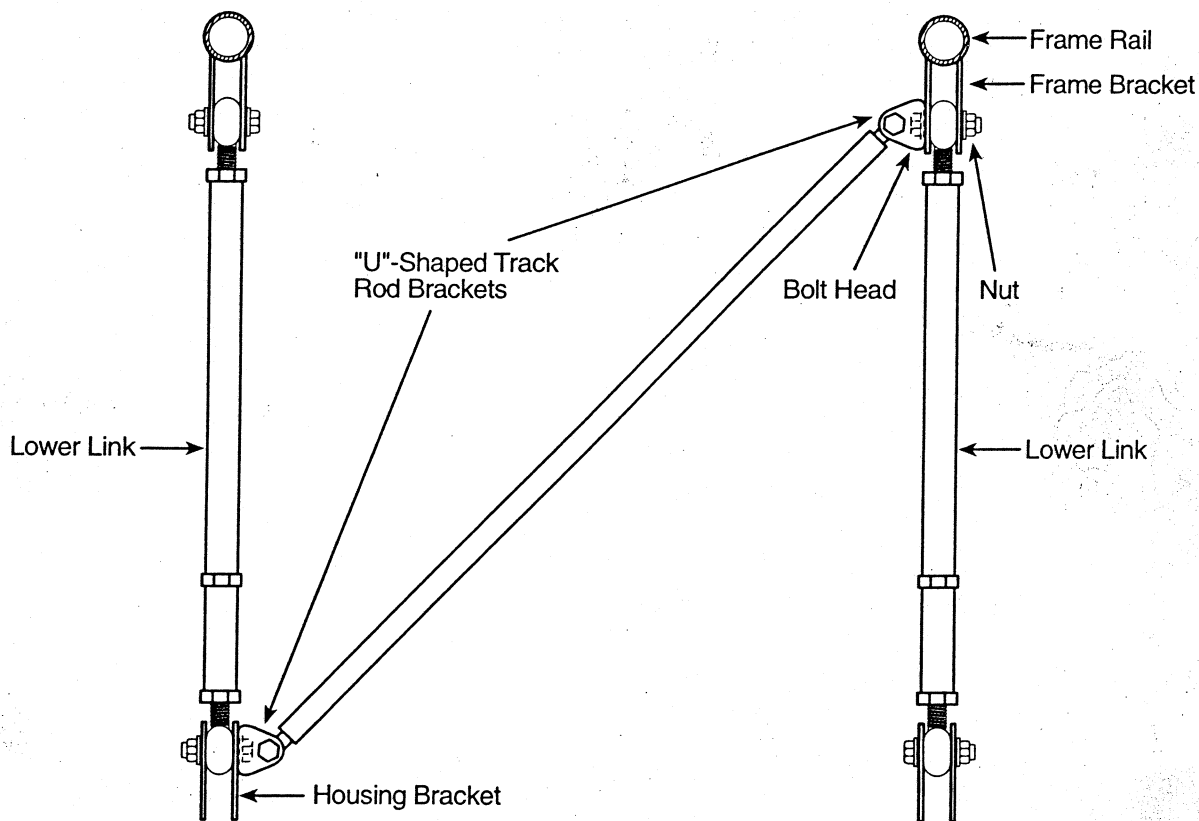

Your Kit Includes

- 1...Semi-Finished Track Rod Tube
- 1...1/2" Threaded Insert
- 2...1/2" Rod Ends
- 2...1/2" Jam Nuts
- 2...Spacers
- 2...1/2" x 2" Bolts
- 2...1/2" Lock Nuts
- 2...Bolt-On Brackets

Illustrations not to scale.