



Information and Installation

762 Bonham Avenue • Columbus, Ohio 43211

Phone: 1-800-345-4545 • FAX (614) 299-4444

Jegster 1976-81 Camaro/Firebird Bolt-In Frame Connectors Kit • 550-40052

- Jack up the car and support with jack stands. Place the rear stands under the body, and clear of the stock leaf spring brackets, so that the rear end housing will hang from the body unsupported.

- Remove the three bolts holding the leaf spring bracket to the rear sub frame on one side of the car only.


- Slide the front of the frame connector into the rear of the front sub frame behind the stock rubber bushing assembly. Slide the rear connector brackets between the frame and the stock leaf spring bracket.

- Install the three bolts through the spring bracket and the connector brackets and into the original frame nuts. Tighten these three bolts. Drill a 3/8" hole through the connector bracket at the

inside wall of the rear frame. This hole should go clear through the frame. It may be necessary to remove exhaust system parts to drill this hole. Install the furnished bolt through this hole and tighten.

- Follow the same procedure to install the connector on the other side of the car.

- Now place the jack stands under the rear end housing and the front stands under the front control arms. Use the illustration provided to mark the hole locations on the side of the front sub frame. Drill these holes clear through the sub frame and the connector brackets. Install the bolts.

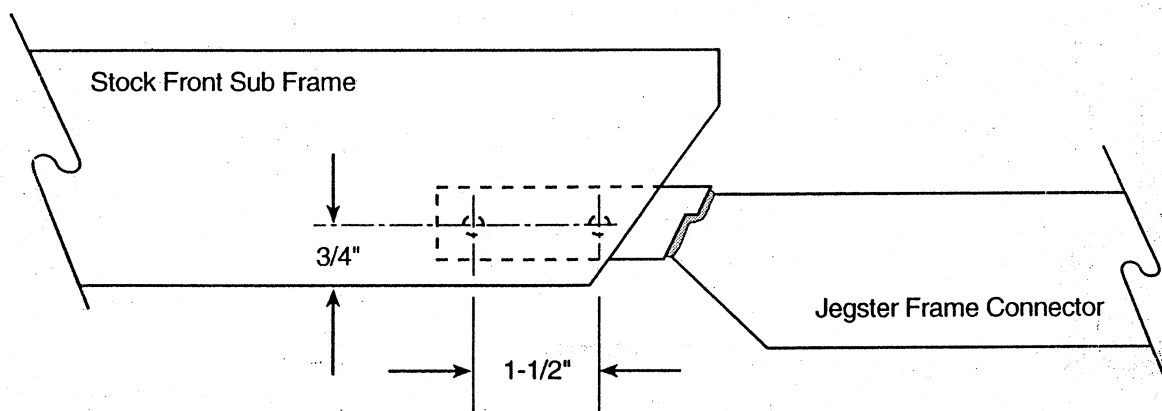

Illustrations not to scale.

Questions or Comments, Call Us At 1-800-345-4545 • We're Here To Help!

Form 424/PG11