


JEG'S PARACHUTING MOUNT KIT #40407

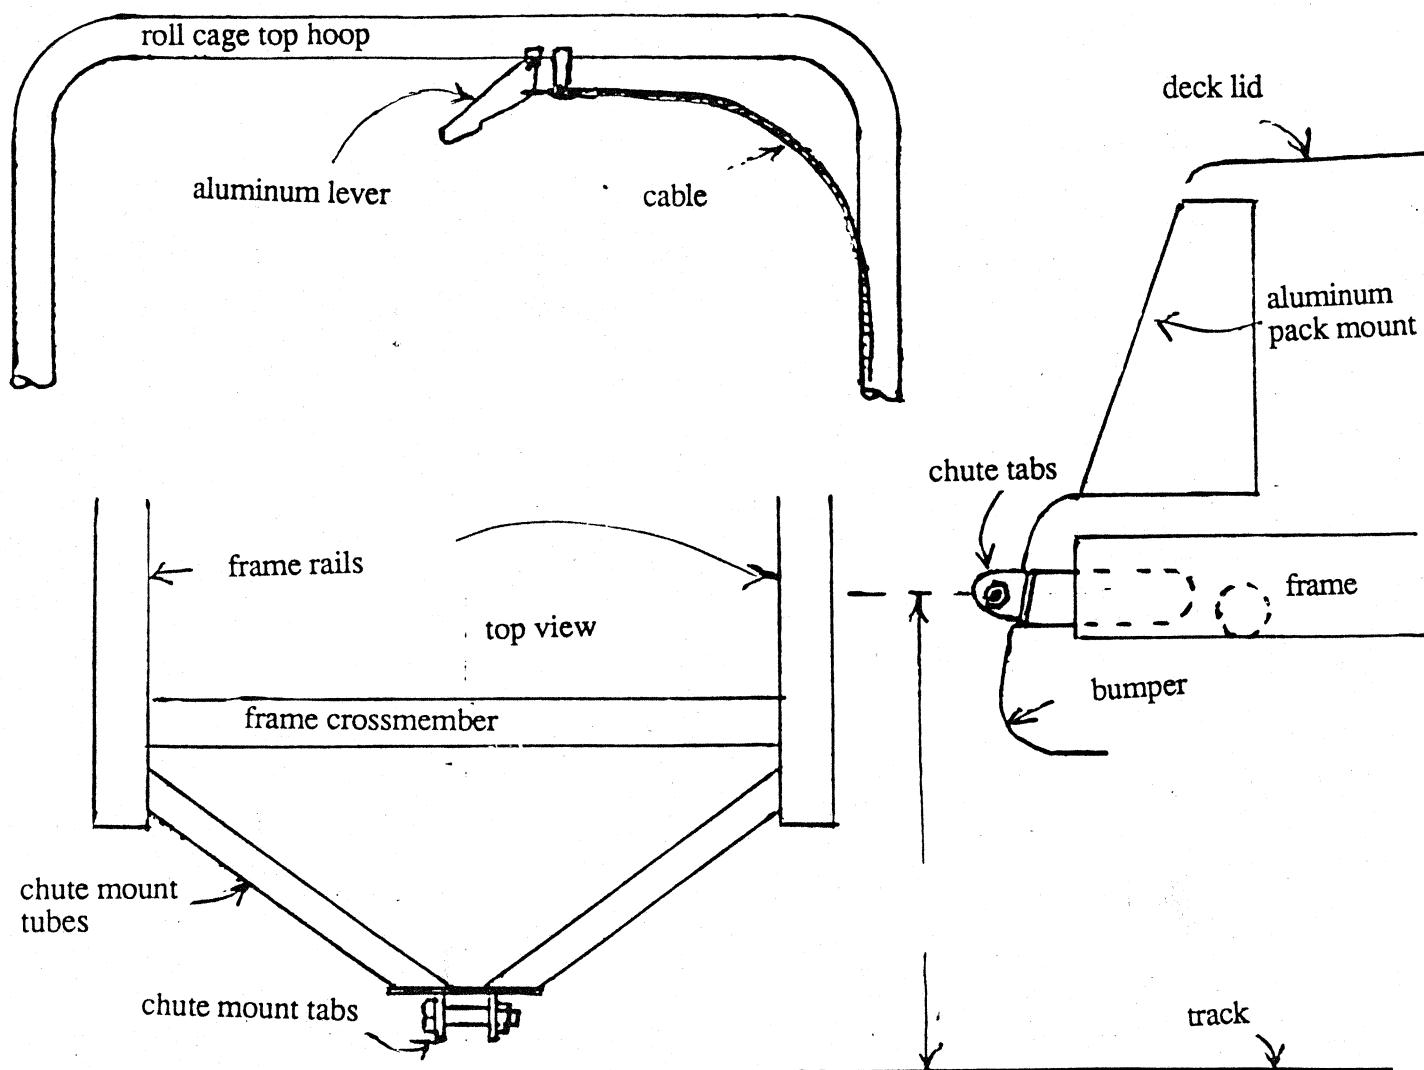

Determine the position of the chute cord mount tabs. The height of the chute attaching point should be approximately 18 inches. Fit and weld the mount tubes. The top and the side view of a typical installation is shown. An aluminum blank for a pack mount is included. After trimming and fitting as necessary to your car body it should be riveted in place. Be sure to position the pack so that the chute cannot become tangled on other car parts when released. Then the nylon pack and the aluminum stiffner may be bolted to the pack mount. A top view of a typical release lever installation is shown. The position of the release lever should be determined while seated in the driving position. The position of the release lever should be determined while seated in the driving position. Also be sure to secure the cable housing so that it cannot slip when the chute is released.