




762 Bonham Avenue • Columbus, Ohio 43211

Information and Installation

Phone: 1-800-345-4545 • FAX (614) 299-4444

Jegster 1982-95 Camaro/Firebird Welded Drive Shaft Loop Kit • 550-40732

• Jack up the car and support it with stands. Unbolt the rear of the drive shaft to slide the loop in place. The exhaust heat shield will need to be removed temporarily, and in some cases the exhaust system must be removed to provide working room to get the loop into position as shown. Lift the carpet in order to drill the floor. Check to see that the loop is centered on the drive shaft as close as possible, but with 1/8" minimum clearance between the loop and the torque arm. Check to see that the brake and fuel lines are not getting pinched during loop installation. Hold the loop in position and drill two holes through the bracket on each side and install the bolts with flat washers on top of the floor. Tighten the bolts securely and reassemble the drive shaft, exhaust system, carpet, etc.

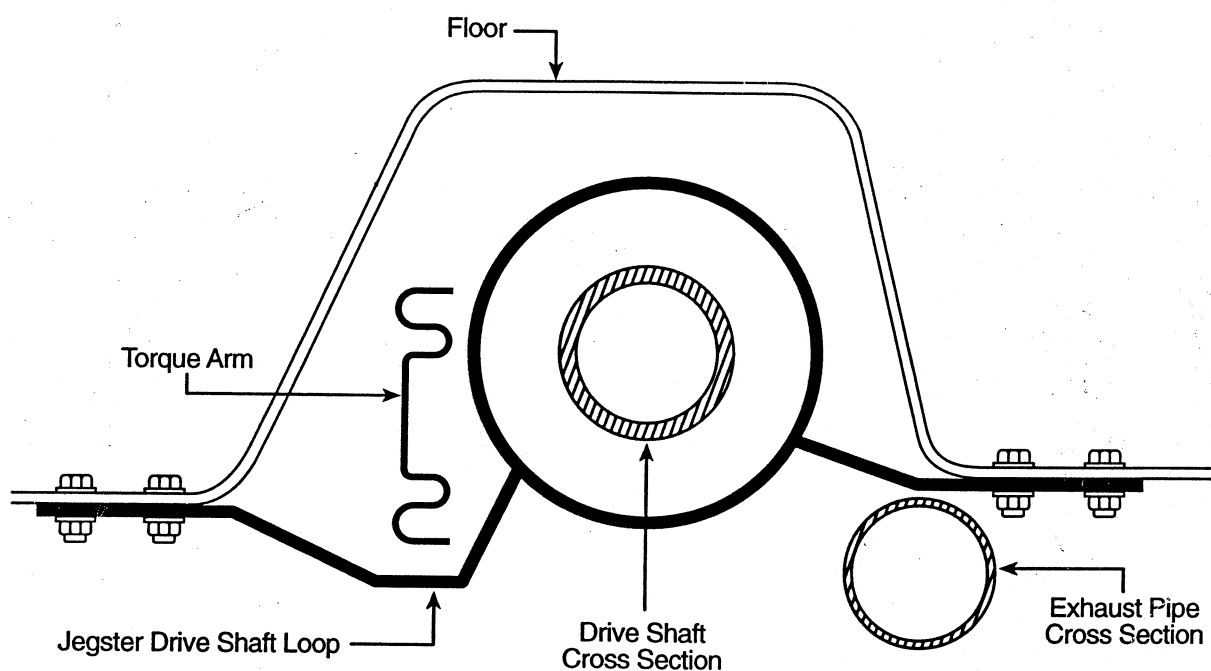

Your Kit Includes:

- 1...Loop Assembly
- 4...Bolts
- 4...Nuts
- 4...Lock Washers
- 4...Washers

Illustrations not to scale.

Questions or Comments, Call Us At 1-800-345-4545 • We're Here To Help!

Form 424/PG29