


Installation Instructions for 15737 Billet Morse Cable Mount

Installation Instructions:

1. Mount Morse cable bracket to scoop mount bracket using the six button head screws and six Nyloc hex nuts. Do not fully tighten the nuts.
2. Loosen the two standard cap screws that hold the billet cable clamp on and slide the throttle cable through the Morse cable mount.
3. Fasten the throttle cable to the carburetor linkage.
4. Slide the Morse cable mount so the set screw in the top of the billet cable clamp is directly above the locking groove in the end of the throttle cable and tighten.
5. Move the Morse cable mount to the desired location on the scoop mount bracket and tighten.
6. Check full range of cable movement before starting vehicle.

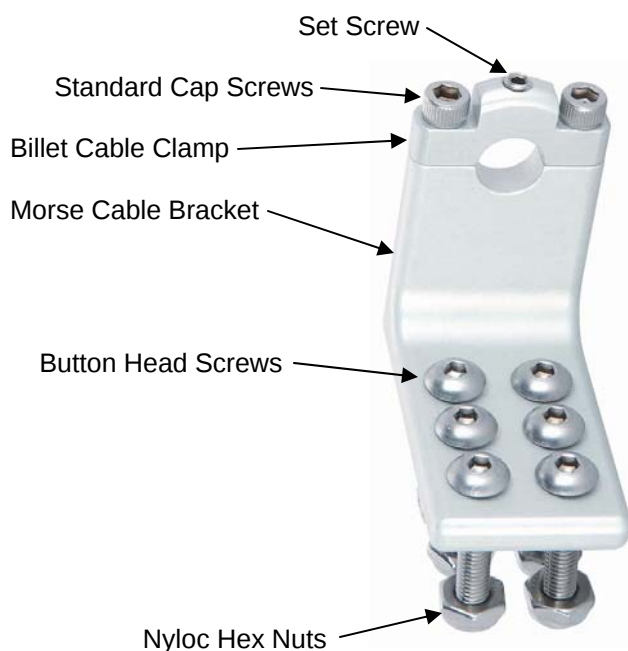

1-800-345-4545 jeps.com