

JEGS: Part # 555-504056 LS Pulley Kit




INSTALLATION INSTRUCTIONS



STEP 1.

MOUNT THE WATERPUMP WITH GASQUETS, WITH THE BRACKET PLATE IN THE DRIVERS SIDE, USING M8-125-90 SH BOLTS TOTAL OF (3) BOLTS IN THE PASSENGERS SIDE M8-125-75 SH BOLTS. THIGHTEN ALL 6 BOLTS TOGETHER.

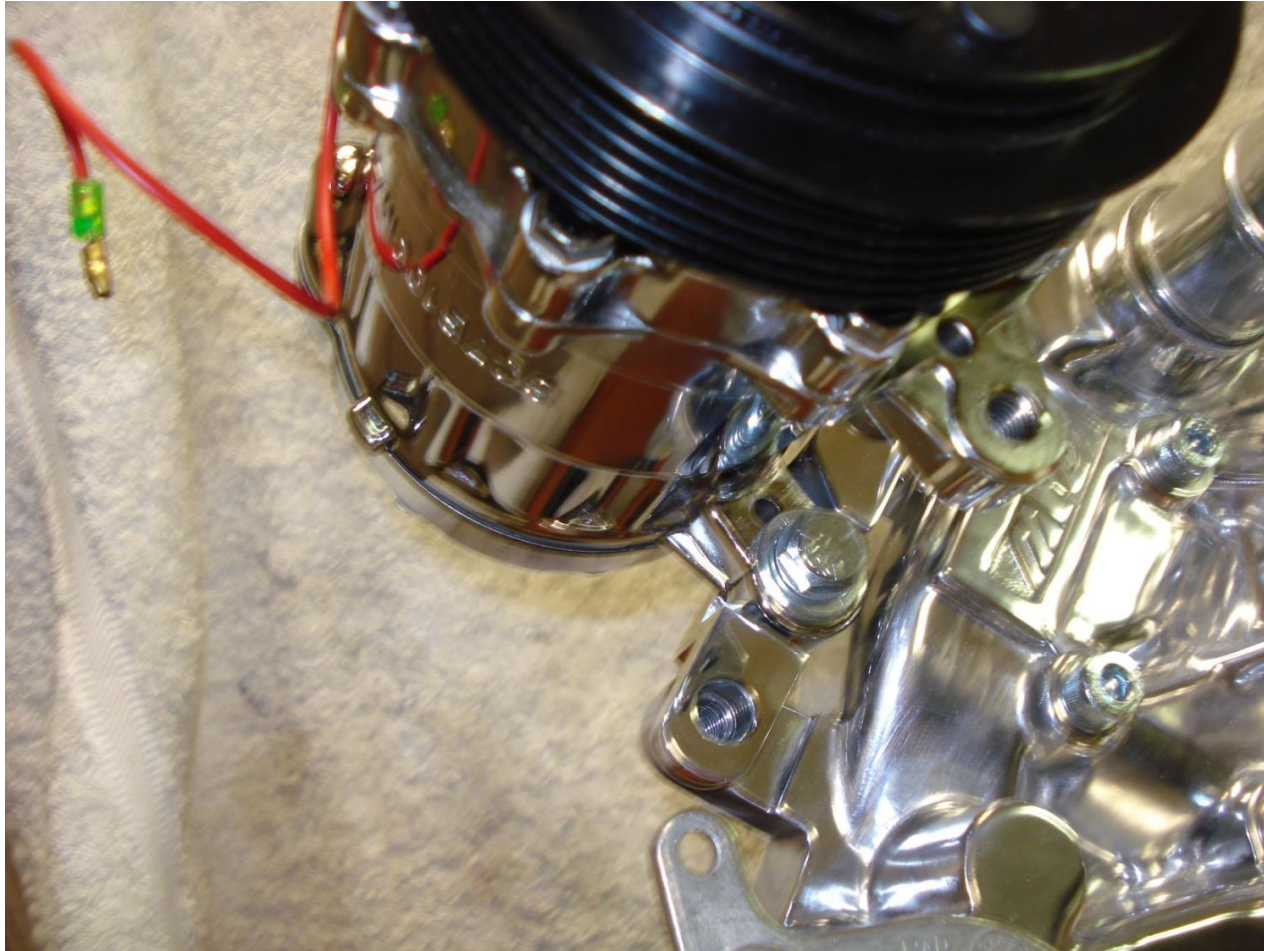


STEP 2.

MOUNT THE AC COMPRESSOR USING THE REAR BRACKET ATTACHED TO THE WATERPUMP, 3/8 -16 -1 ¼ BOLT.




STEP 3.

MOUNT THE LARGE BRACKET PLATE WITH THE 2" SPACERS AND THE IDLER ON THE DRIVERS SIDE 3/8-16-4 SH BOLT. PASSENGER SIDE USE THE 3" SPACER USING M10-110 SH BOLTS. DON'T TIGHTEN FULLY UNTIL READY.

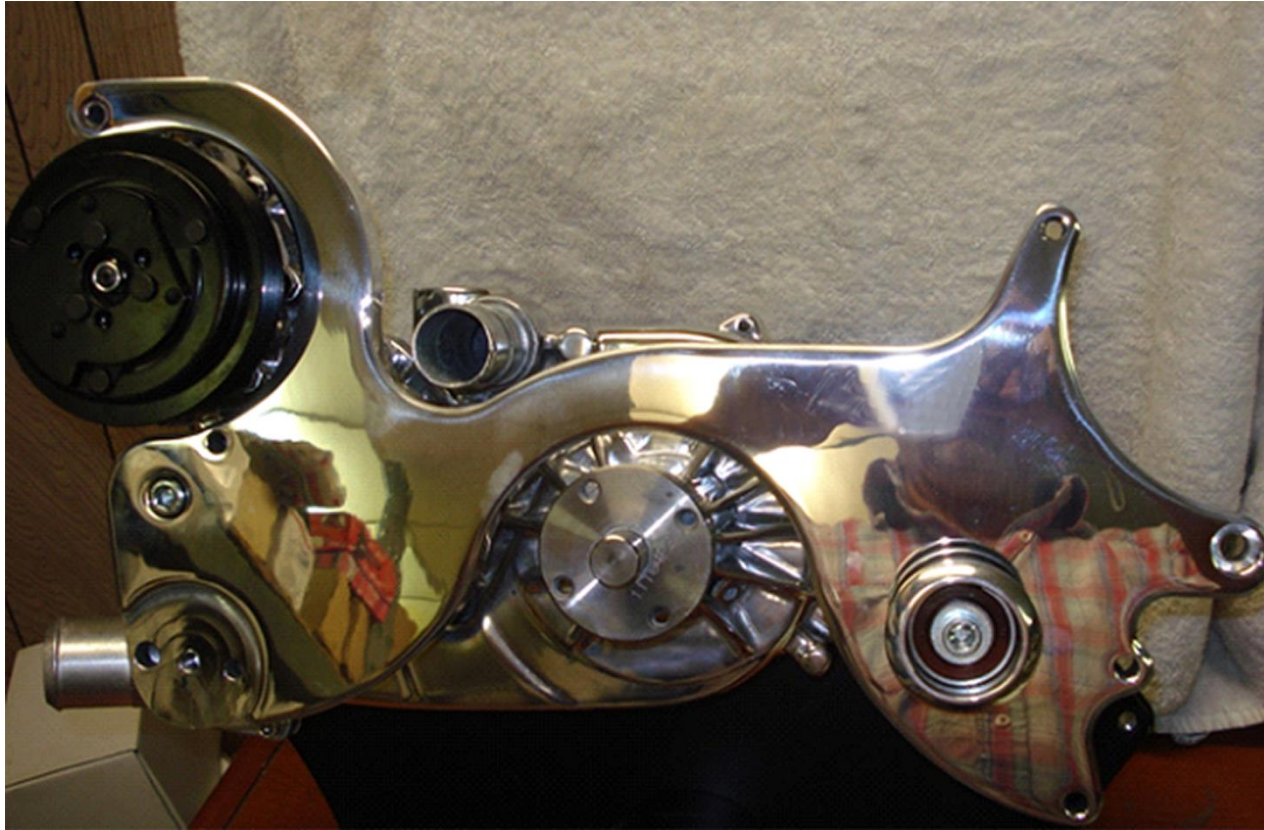


STEP 4.

MOUNT THE AC COMPRESSOR USING THE TOP AND BOTTOM EARS USING BOLTS M8-125-30 BH BOLTS.

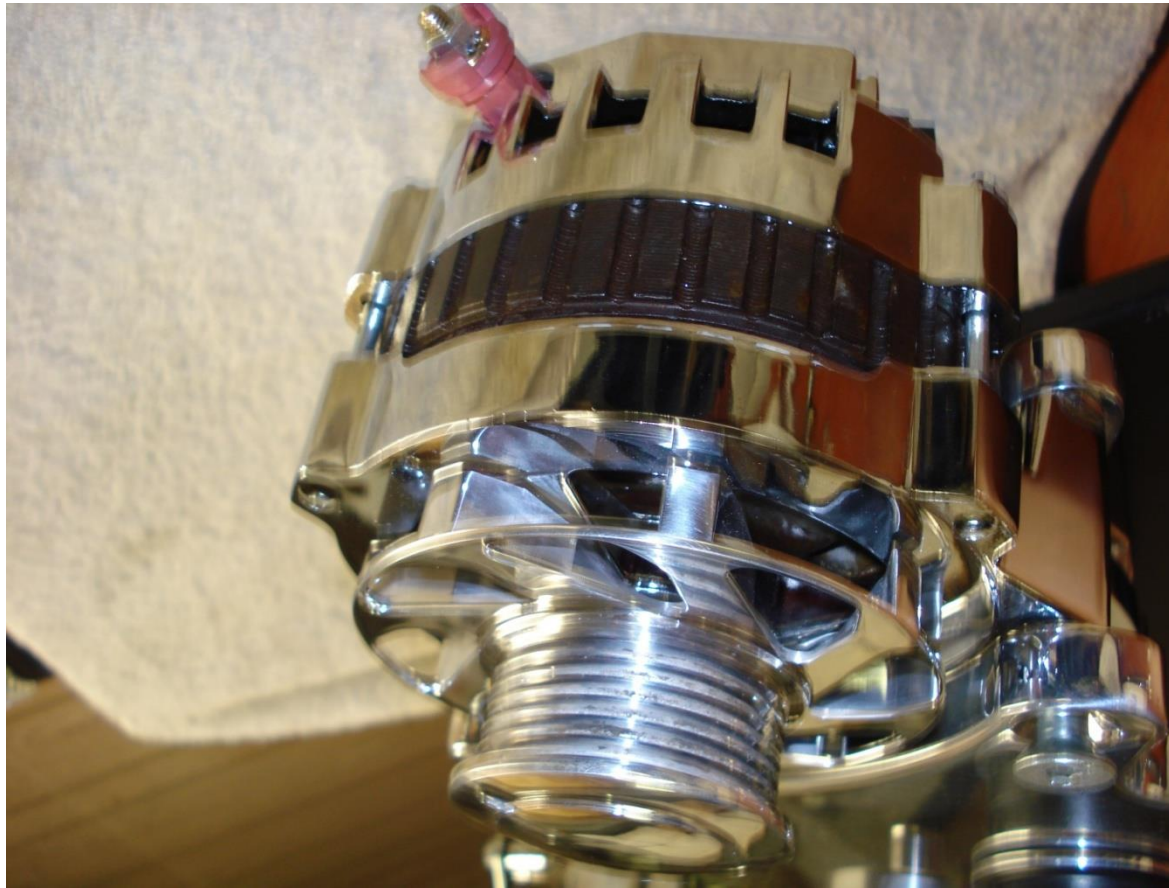


STEP 5.

**MOUNT THE TOP EAR ON THE ALTERNATOR USING M8-30 BOLT AND
BOTTOM EAR IS 3/8-16-3 ½ FH BOLTS. NOW TIGHTEN ALL BOLTS FROM THE
LARGE BRACKET PLATE. AND TIGHTEN THE REAR AC BRACKET.**

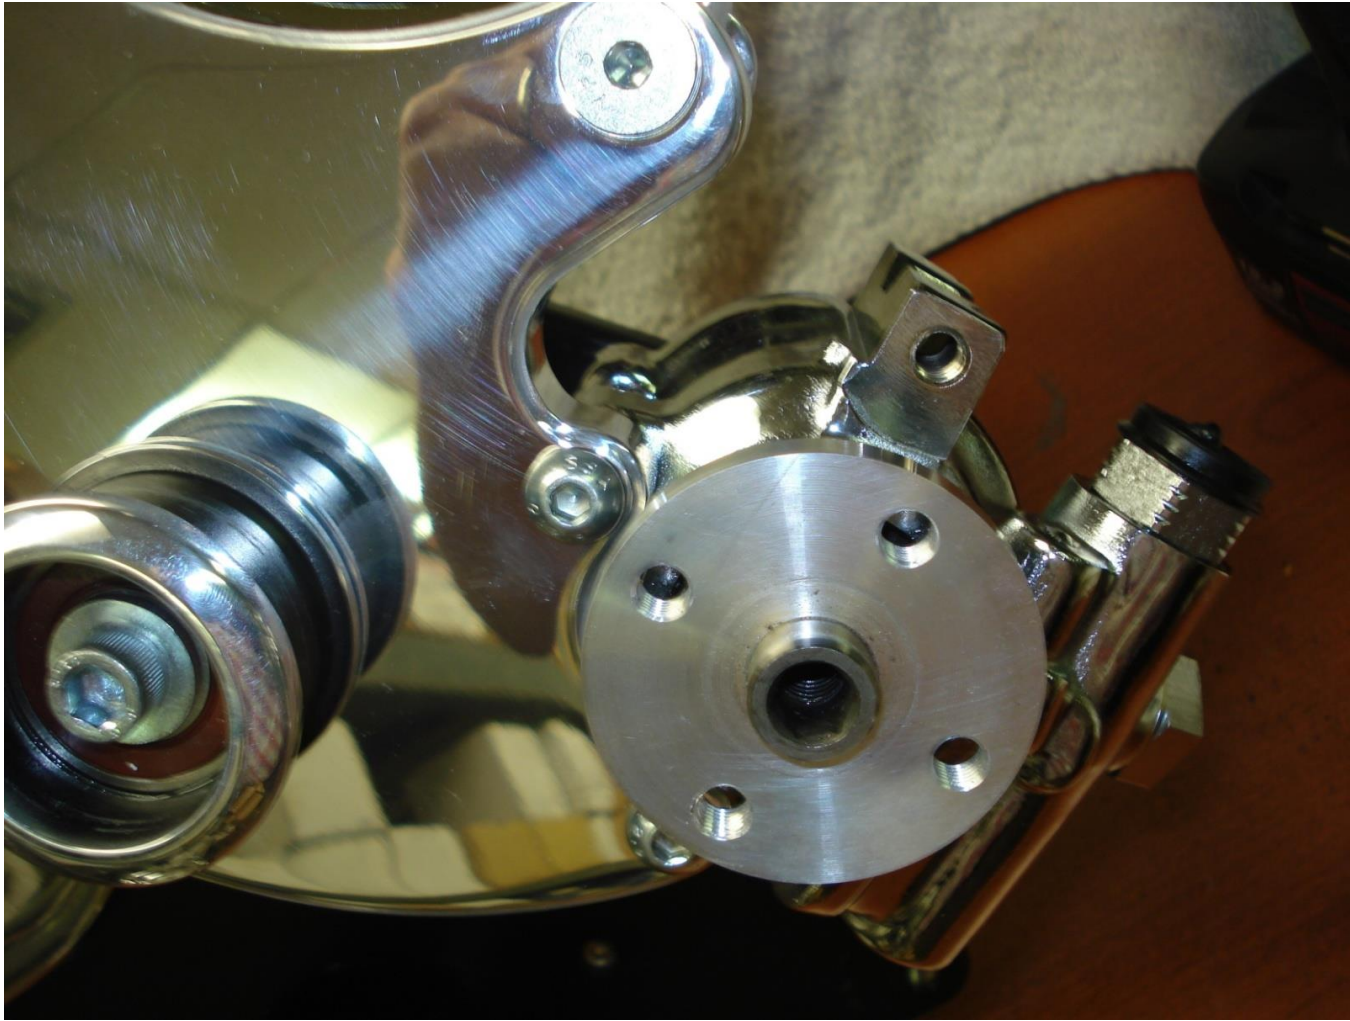

STEP 6.

MOUNT THE POWER STEERING PUMP USING THE M8-125-30 FH.

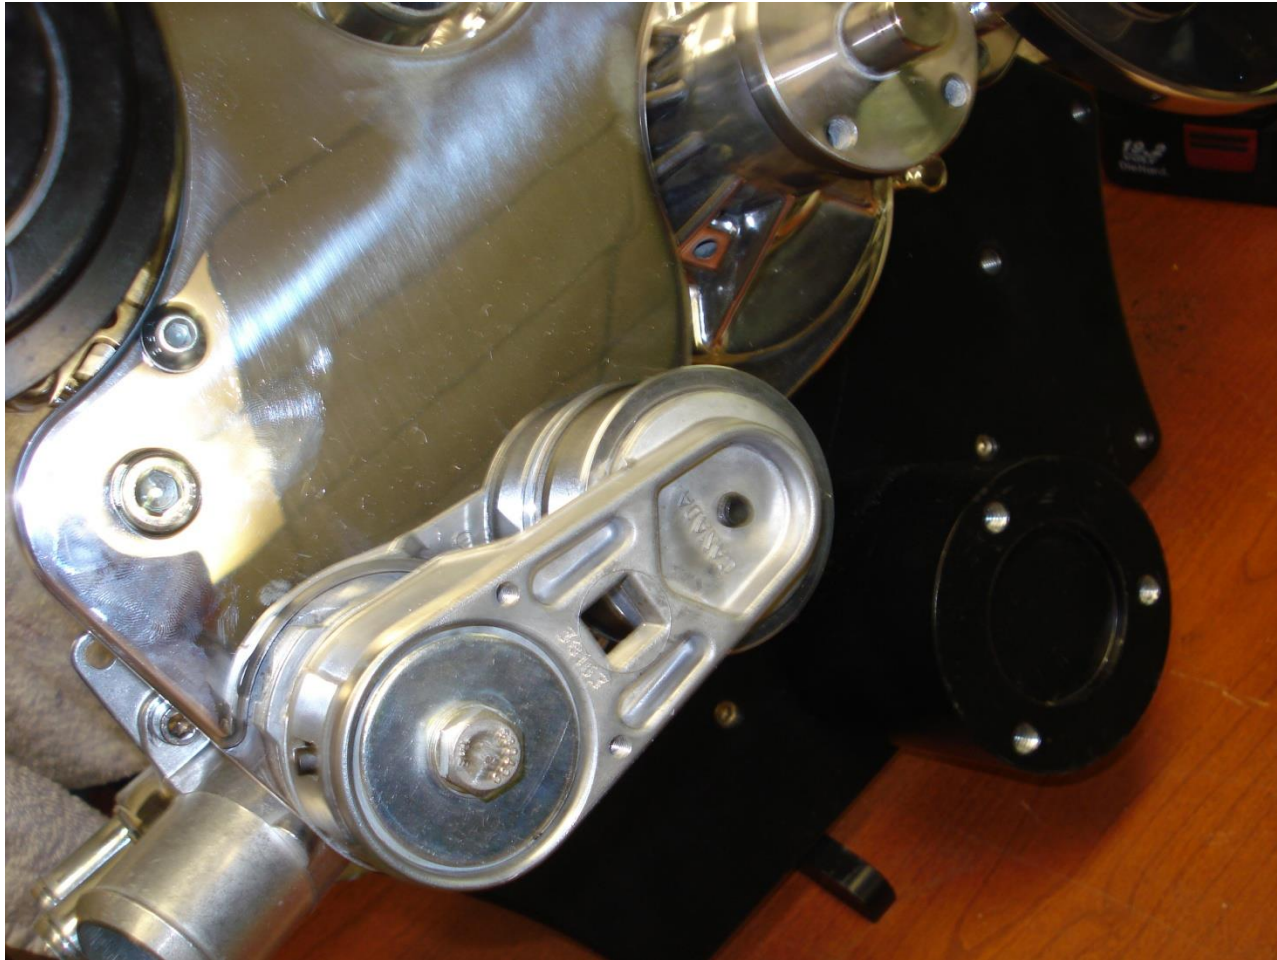

STEP 7.

MOUNT THE TENSIONER USING THE 3/8-16-2 ¾ HS.



STEP 8.

MOUNT THE HUB USING THE BOLT M16-120 WITH M16 FLAT WASHER.

ALERT: YOU MUST USE 2000 CHEVY CAMARO BALANCER




STEP 9.

MOUNT THE CRANK PULLEY USING THE BOLTS 3/8-16-1" SH.



STEP 10.

MOUNT THE POWER STEERING PULLEY USING 5/16-24-1/2 FH.

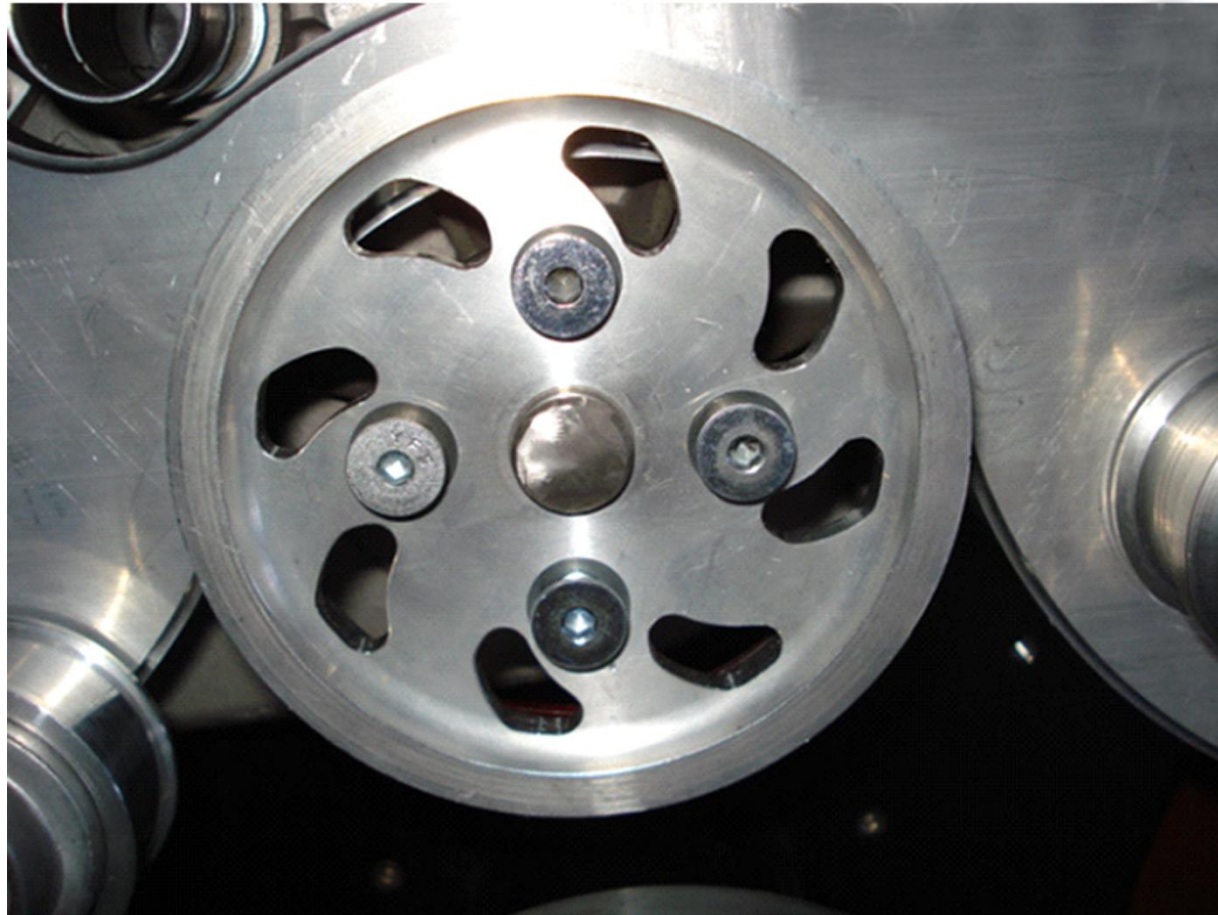

STEP 11.

MOUNT THE WATER PUMP PULLEY BY USING 5/16-24-3/4 FH




STEP 12.

MOUNT THE AC COVER USING THE BOLTS M6-20 BH.



STEP 13.

INSTALLING THE SERPENTINE BELT SIZE K060804 BRAND NAME GATES

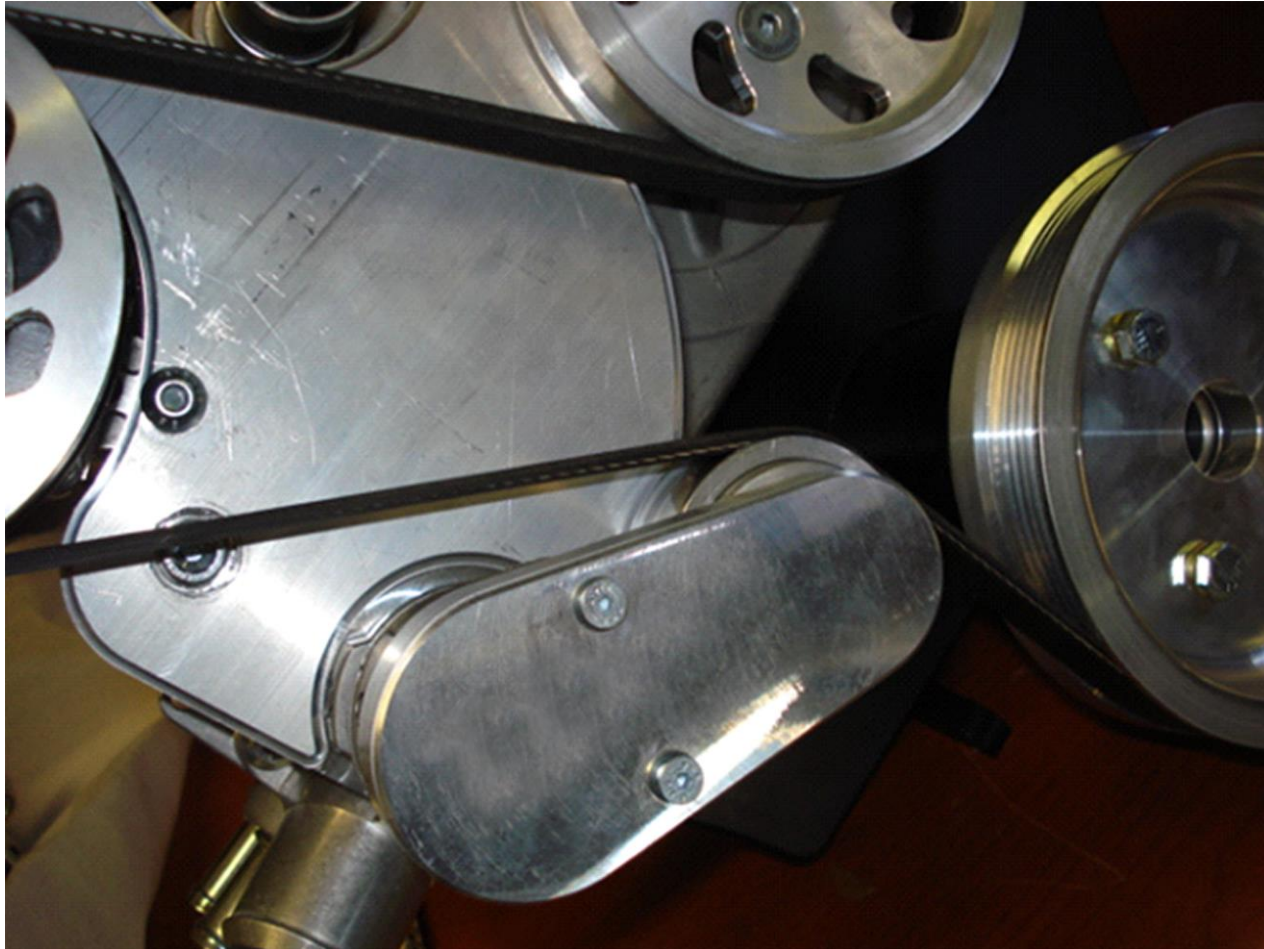

STEP 14.

FINAL STEP INSTALLING THE TENSIONER COVER.

Warning:

Do not start engine without power steering fluid and make sure bleed your power steering system before starting your car. If you need help on how to bleed your power steering system, please contact a professional.

Warning :

This track system is not made for racing, we will not be responsible for misuse of product and if you don't know how to install kit please get a professional mechanic to install for you.