

Installation Instructions for 702150 & 702151 High Back Sport Office Chair

Tools needed for assembly (not included): Philips screwdriver, Allen wrench

Please be sure all parts listed are included before attempting assembly.

Parts included:	(2) Arms
(1) Base	(2) Armrest Pads
(5) Caster Wheels	(4) SS Philips Screws
(1) Hydraulic Unit	(4) SS Washers
(1) Plastic Cover	(10) SHC Screws
(1) Control Unit	(10) Locking Washers
(1) High Back Chair	(10) Washers


1. Attach (5) caster wheels to base.



2. Install the hydraulic unit into middle of base. Place plastic cover over hydraulic unit.



3. Fix control unit to the base of the chair with (4) Locking Washers, (4) Washers & (4) SHC Screws. Be sure front of control unit matches front of chair.

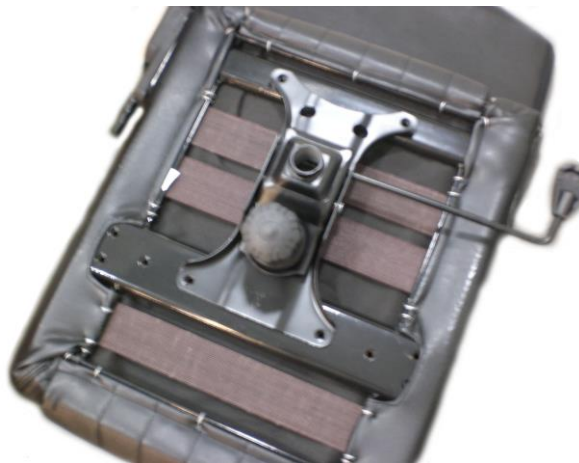


4. Attach armrest pads to arms with (4) Washers & (4) SS Philips Screws (2 per armrest). Be sure turndown faces the front of the armrest.



5. Attach assembled armrests to bottom of chair with (6) Locking Washers, (6) Washers & (6) SHC Screws (3 each side). Adjustable for your comfort.



6. Lift chair over base. Place (A) hydraulic unit into (B) center of control unit.

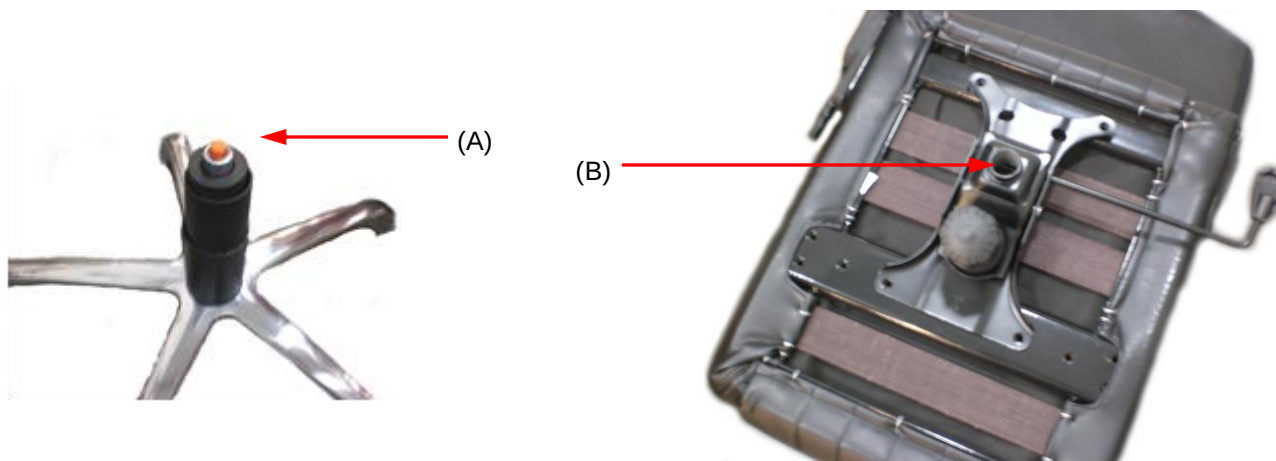

7. Enjoy comfort and support of a performance car seat in your office.