

Assembly Guide

Workbench Stool

555-81187



Table of Contents

Tools.....01

Read Before Use.....01

Parts List.....02

Assembly.....03-06

Tools

The following tools are included for the assembly of this shop stool.

- 14mm Wrench - Bolts
- 15mm Wrench - Nuts
- 5mm Hex - Screws

Read Before Use

Thank you for your purchase of this JEGS 555-81187 Workbench Stool.

Before assembly, please be sure to verify that all of the components have been received. Reference the parts list on the following page. If any components are missing or damaged please contact customer service at: 1.800.345.4545.

If you are having issues, or have questions regarding the assembly of this shop stool, please contact our technical support department at: 1.800.345.4545.

Return Information: Before modifying any of the parts of this shop stool, please trial fit all components. *Once this stool has been modified, it will not be accepted for return.*

Parts List




PART #	PART	QTY	PART #	PART	QTY
1	Seat Cushion	1	8	Handle Tray	1
2	Seat Back	1	9	Casters	3
3	Angled Brackets	5	10	Locking Casters	2
4	Curved Brackets	5	11	Screws (M6-1)	12
5	Seat Back Bracket	1	12	Nuts (M10-1.5)	15
6	Fixed Sleeve	1	13	Bolts (M10-1.5)	10
7	Gas Strut	1			

Assembly




STEP 1

- Insert the five angled brackets (#3) into the fixed sleeve (#3).
- The fixed sleeve collar needs to be located toward the top.
- Secure the brackets with provided nuts (#12) and bolts (#13).

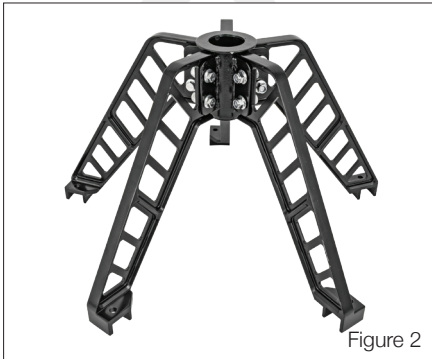

STEP 2


- Loosely assembly, but do not fully tighten until the base it complete.

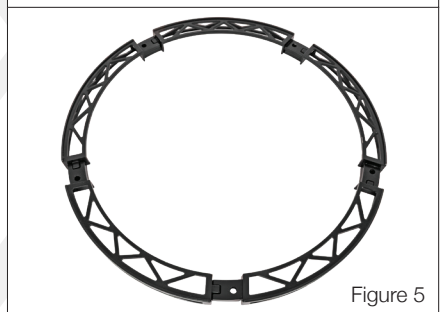

STEP 3

- Assembly of the curved brackets (#4), which secure the casters, is made by stacking their end brackets as shown above. The notch on the side of the bracket located around the square casting on the adjoining bracket.

Assembly

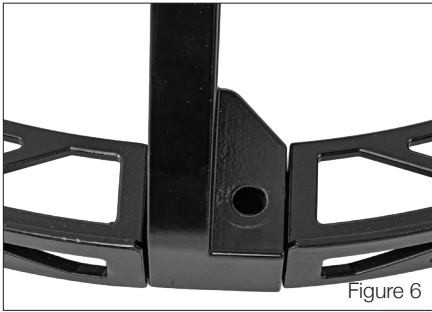


STEP 4

- Place the end of the angled bracket (#3) into the slot where the two curved brackets (#4) join.




STEP 5

- The underside of the curved bracket (#4) has a recess to secure the hex nut base of the caster (#9 & #10).
- Push the caster's threaded rod through the brackets and secure with a nut (#12).

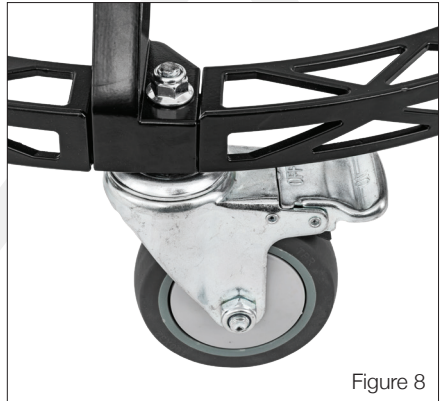

STEP 6

- Alternate locking (#10) and non-locking (#9) casters.

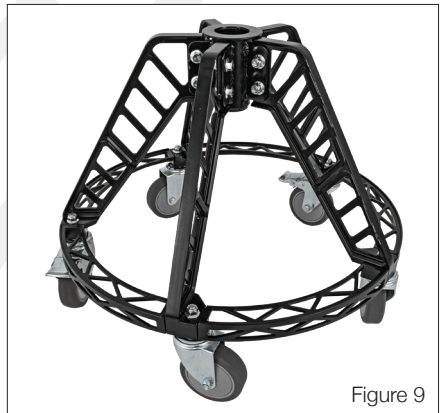

STEP 7

- At this point the base of the stool is complete. Securely tighten all hardware.

Assembly



Figure 10

STEP 8

- Slide the gas strut (#7) into the fixed sleeve (#6).



Figure 11

STEP 9

- Secure the handle tray (#8) to the seat cushion (#1) using the supplied screws (#11). Ensure that the tray and seat cushion are correctly oriented for the backrest mounting holes



Figure 12

STEP 10

- Position the short end of the seat back bracket (#5) over the handle tray (#8). Secure with the supplied screws (#11).



Figure 13

STEP 11

- Secure the seat back (#2) to the seat back bracket (#5) using the supplied screws (#11).

Assembly



Figure 14

STEP 12

- Place the tray handle (#8) onto the gas strut (#7) and press down to securely attach.



Figure 15

STEP 13

- Squeeze the handle to raise, or lower, the seat.



Figure 16

STEP 14

- The seat is completely assembled. Engage the locking casters when you are working.



If any components of this Workbench Stool are missing or damaged,
or if you have any questions contact us at 1.800.345.4545

Return Information: *Once the stool has been
modified, it will not be accepted for return.*