



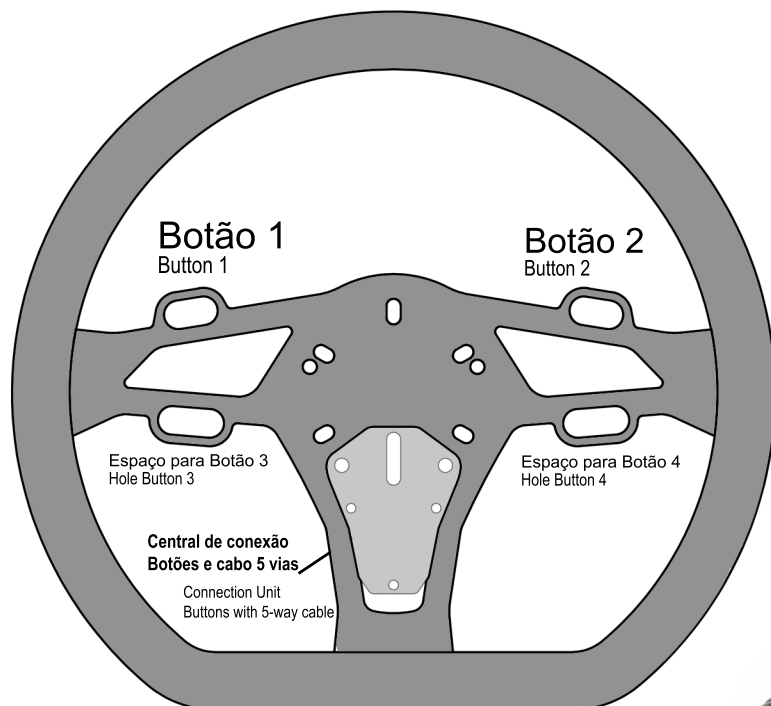

Instructions *ProStreet* (PRS-XX)

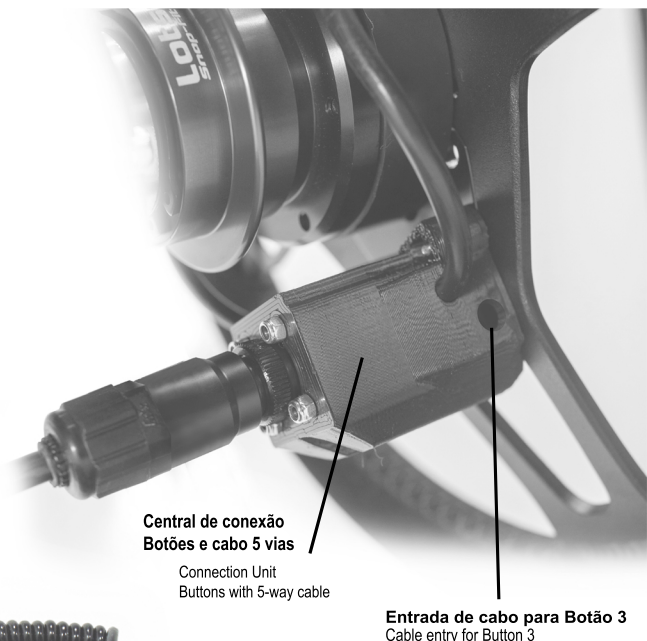

Costas do Volante
Back Side



Button 1

Universal use button, already installed on ProStreet.
To connect the chosen function, use the wire labeled Button 1 and the Neutral wire.

Button 2

Universal use button, already installed on ProStreet.
To connect the chosen function, use the wire labeled Button 2 and the Neutral wire.

Entry for Button 3 and 4

The Pro Street electronics are prepared for up to 4 buttons.
When you unpack your Pro Street, the connectors will be outside the black box, if you are not going to use them, put them inside.

To install the auxiliary buttons, simply connect them to the red plug, which will be out if the piece is new, and attach the buttons to empty spaces on the steering wheel.

Fixing Holes

The ProStreet Steering Wheel has universal hole, it is possible to install 3, 5 and 6 hole adapter hubs. Some brands are Lotse, Longacre, Grant, Momo, Sparco, OMP, NRG among others.

5-Way Cable

The cable comes with the ProStreet, the connector side is fixed on the central and the other side must be connected to the car.

Botão 1

Botão de uso Universal, já instalado no ProStreet.
Para a ligação da função escolhida, basta utilizar o fio identificado como Botão 1 e o fio Neutro.

Botão 2

Botão de uso Universal, já instalado no ProStreet.
Para a ligação da função escolhida, basta utilizar o fio identificado como Botão 2 e o fio Neutro.

Entrada para Botão 3 e 4

A Central do Pro Street esta preparada para até 4 Botões. Quando você desembalar seu Pro Street, os conectores estarão para fora da caixa preta, se não for utilizar, coloque-os para dentro. Para instalar os botões auxiliares, basta conectá-los ao plug vermelho, que estará para fora se a peça for nova, e fixar os botões aos espaços vazios no volante.

Furos de Fixação

O ProStreet possui furação universal, ela permite instalação para cubos de 3, 5 e 6 furos, de marcas como Lotse, Longacre, Grant, Momo, Sparco, OMP, NRG entre outras.

Cabo 5 vias

O Cabo acompanha o ProStreet, o lado do conector é fixado a central e o outro lado deve ser ligado ao carro.