



# 49901-Passenger Side Front Seat Adapter '97 - 2002 Wrangler

READ AND UNDERSTAND INSTRUCTIONS BEFORE STARTING

## INSTALLATION INSTRUCTIONS:

### **Step 1)**

Orient your new frame as shown in Figure A. Attach your new seat to the Frame using the 4 bolts supplied.


### **Step 2)**

Remove the 4 bolts attaching your old seat brackets to the vehicle's floor. Save the bolts for later usage. Remove the old seat from the vehicle.

### **Step 3)**

Locate the 4 bolts that mount the old seat brackets to your old seat. Remove these bolts and save them for later.


**Figure B**

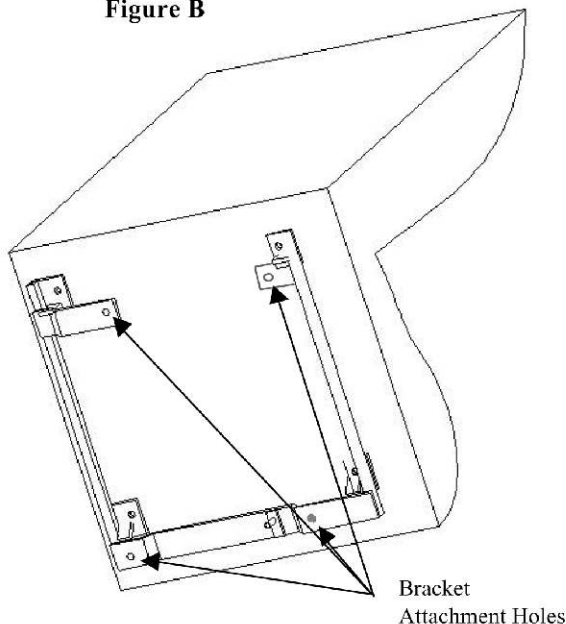

### Included Parts:

|         |                 |
|---------|-----------------|
| 1-Frame | 2-1/4" Bolts    |
| 1-Wire  | 4-1/4" Washers  |
| 1-Arm   | 2-1/4" Nuts     |
| 1-Plate | 4-5/16" Bolts   |
|         | 4-5/16" Nuts    |
|         | 8-5/16" Washers |

**Figure A**

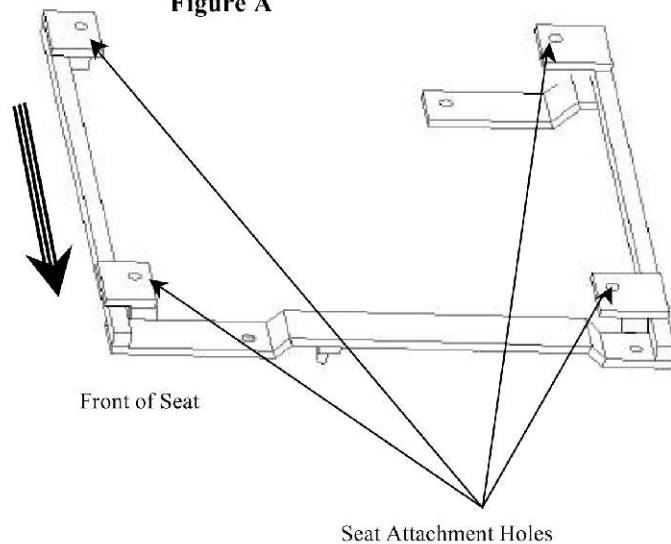

**Step 4)** Using the 4 bolts you just removed, mount the old seat brackets to your new seat frame. Make sure you keep the original seat bracket orientation.

**MADE IN CHINA**

Diagram not to scale. Items shown for locating and identification purposes only.

**RAMPAGE PRODUCTS** 9225 Stellar Ct. #C, Corona Ca 92883-4919 ♦ Tel : (951) 277-4949 ♦ Fax: (951) 277-2295

**FOR A DEALER NEAREST YOU CALL: (866) 767-4123 • [www.rampageproducts.com](http://www.rampageproducts.com)**



## 49901-Passenger Side Front Seat Adapter • '97 - 2002 Wrangler

READ AND UNDERSTAND INSTRUCTIONS BEFORE STARTING

**Figure C**

**Step 5)** Attach the U-Bracket to the Bracket.

**Step 6)** Loosely attach the Plate to the Frame as shown.

**Step 7)** Route the Arm under the U-Bracket, assuring the bend is curved up towards the back of the seat.


**Step 8)** Loosely attach the Arm to the Plate using the 2 1/4" bolts.

**Step 9)** Attach the Wire to the Plate as shown. This will be a very tight fit.

**Step 10)** Securely tighten all hardware using wrenches.

**Step 11)**  
Mount your new seat into your vehicle by attaching the Brackets to the floor using the original 4 bolts.

**For access to the rear seat when installed:**  
Move the arm sideways and push the seat forward in an upward motion

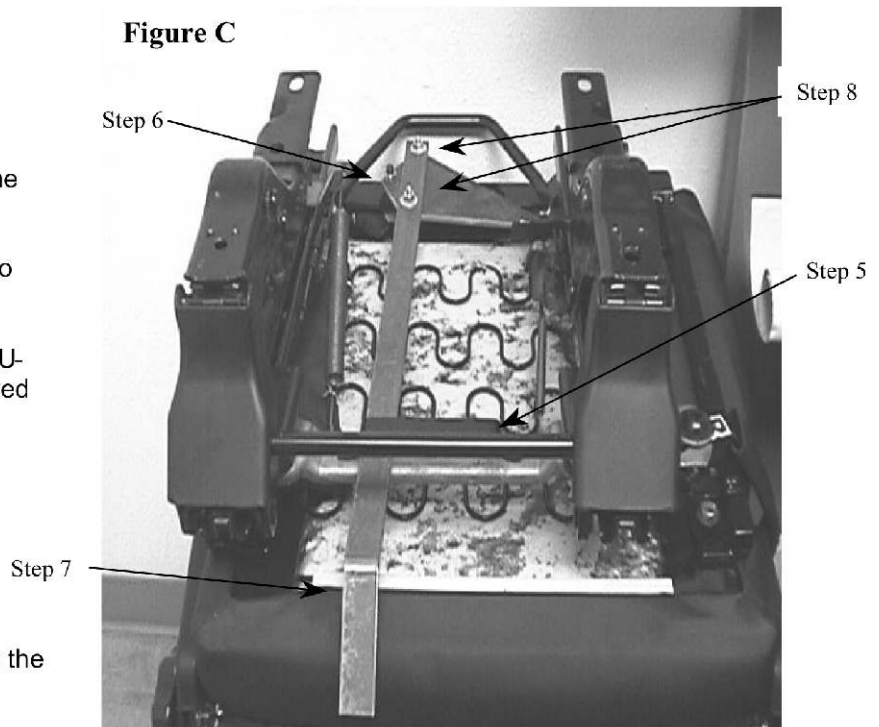

**Figure D**

