





Standard Bucket Seat Assembly Instructions

1.

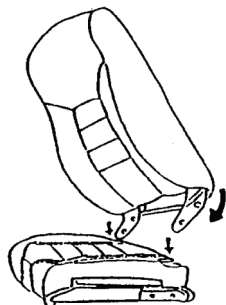


1. Unwrap the side cushion trim in order to access the bolts for tightening

2.

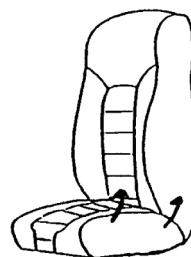


2. Position brackets of Back Rest through the slots of cushion trim as shown in diagram.

3.

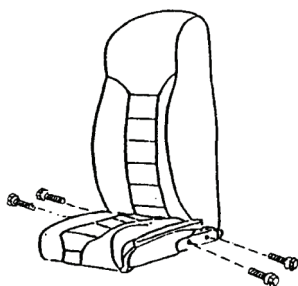

3. Securely tighten 4 provided 10mm bolts through the holes of Back Rest bracket to the cushion frame as shown in diagram.

4.

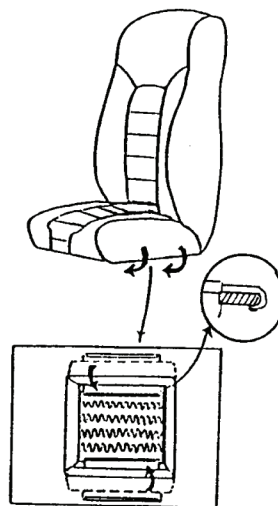

4. Carefully wrap the side cushion trim over the Back Rest bracket and hook to the plate underneath the cushion frame as shown in diagram.