

LUND®

Shadow™ Wiper Cowl

Chev/GMC
Full Size Pickup 88-97
FS Suburban, Blazer 92-97
Denali 99 up
P.N. 25501, P.N. 25001

Thank you for purchasing one of the many quality items manufactured by Lund Industries, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment.

This product has been designed and engineered to correctly fit and complement only the vehicle(s) listed in the heading. For easiest installation and the best final appearance, read the complete instruction BEFORE you begin.

ATTENTION: FIT PARTS BEFORE PAINTING!

Please follow all instructions for the proper installation of this part to the vehicle. Lund Industries, Inc. **DOES NOT AND WILL NOT** accept for return or credit any part that has been **PAINTED**. Please fit this part to your vehicle, **BEFORE PAINTING**. **NO EXCEPTIONS TO THIS RETURN POLICY WILL BE MADE.** Painting of product does not invalidate warranty.

INSTALLATION INSTRUCTIONS

NOTE: The Shadow Wiper Cowl cover mounts with 6 self-tapping screws to the vehicle's cowl directly behind the hood. The outside edges of the Shadow™ mount with Dual loc® to the windshield just inside of the windshield trim.

1. Make sure Dual loc mounting areas on Shadow are clean and dry. With adhesive promoter included, place a thin even layer where the Dual loc will be placed. Then peel one of the adhesive backings off and adhere according to **DIAGRAM A**.
2. Test fit Shadow by setting it on the cowl. If the antenna appears to be in the way you may want to temporarily remove the mast.
3. After centering the cowl cover, mark all attachment holes. Remove Shadow.
4. Using an 1/8" drill bit, drill pilot holes in the center of the marked hole locations.
5. Using the provided alcohol prep pad, clean the areas where the Dual loc will be adhered to the vehicle's trim, windshield and/or cowl.
6. Make sure the temperature is above 60° F and the windshield and cowl are clean and dry. Then remove the adhesive backings on the Dual loc.
7. Line up the mounting holes in the cowl cover with the holes previously drilled into the cowl. Once this is done adhere the Dual loc to the cleaned areas on the outside edges of the windshield.
8. Then using the included washers and screws, snugly tighten assembly. (**DIAGRAM A**)
9. Attach the stand in the center of the cowl cover (make sure there is no wiper interference) with the Dual loc adhered to the Shadow and the suction cup to the windshield. Adjust by twisting the Dual loc end (**SEE DIAGRAM B**).

DIAGRAM A


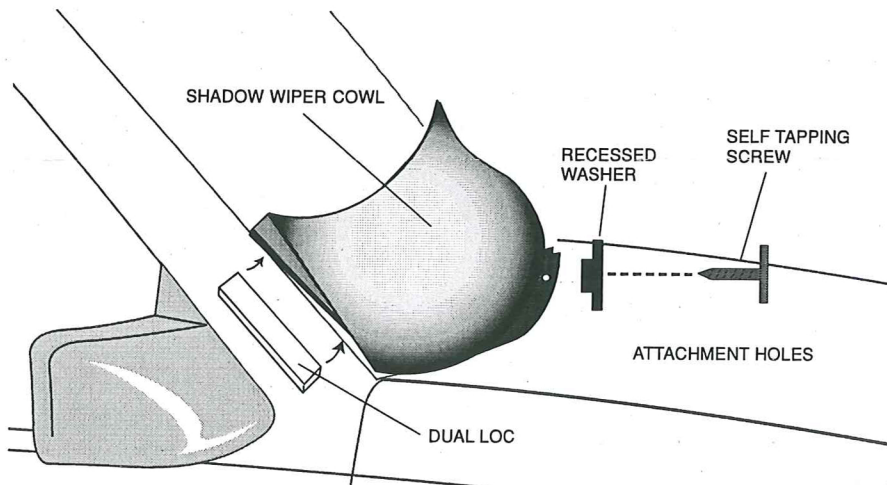


DIAGRAM B

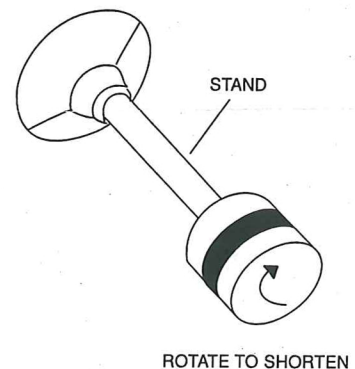

PATENT STATEMENT: It is Lund Industries, Inc.'s policy to protect its creative product designs and utility designs for sunvisors, cabspoilers, rooftop spoilers, hood protectors, grill inserts, etc. by all legal means available, including patents, shape/design trademarks, and brand/product name trademarks. Lund presently owns U. S. patents D273,672; D286,143; D288,309; D288,310; D291,295; D305,017; D308,041; 4,883,139; 4,883,303; 4,929,013; 5,018,779 and Canadian Industrial Design Registrations (RD) 52131 (1983), (RD) 54036 (1985), (RD) 54300 (1985), (RD) 54513 (1985), (RD) 64646 (1989), (RD) 64701 (1989), (RD) 66123 (1990) and Canadian Utility Registration 1,262,252. Other patents are pending. Lund actively enforces its patent and trademark rights and will take action against infringers to protect its interests. Lund, however, solicits and prefers trade cooperation in the avoidance of infringement.

© Lund Industries, Inc. 1994

12/21/2012 45473 Rev. B

LUND®

Lund International

800-241-7219 • Visit us at lundinternational.com

© 2012 Lund International, Inc. All rights reserved.

Lund® and the Lund® logo are trademarks of Lund International, Inc.

