


2001-2007 SILVERADO 6.6L BLACK

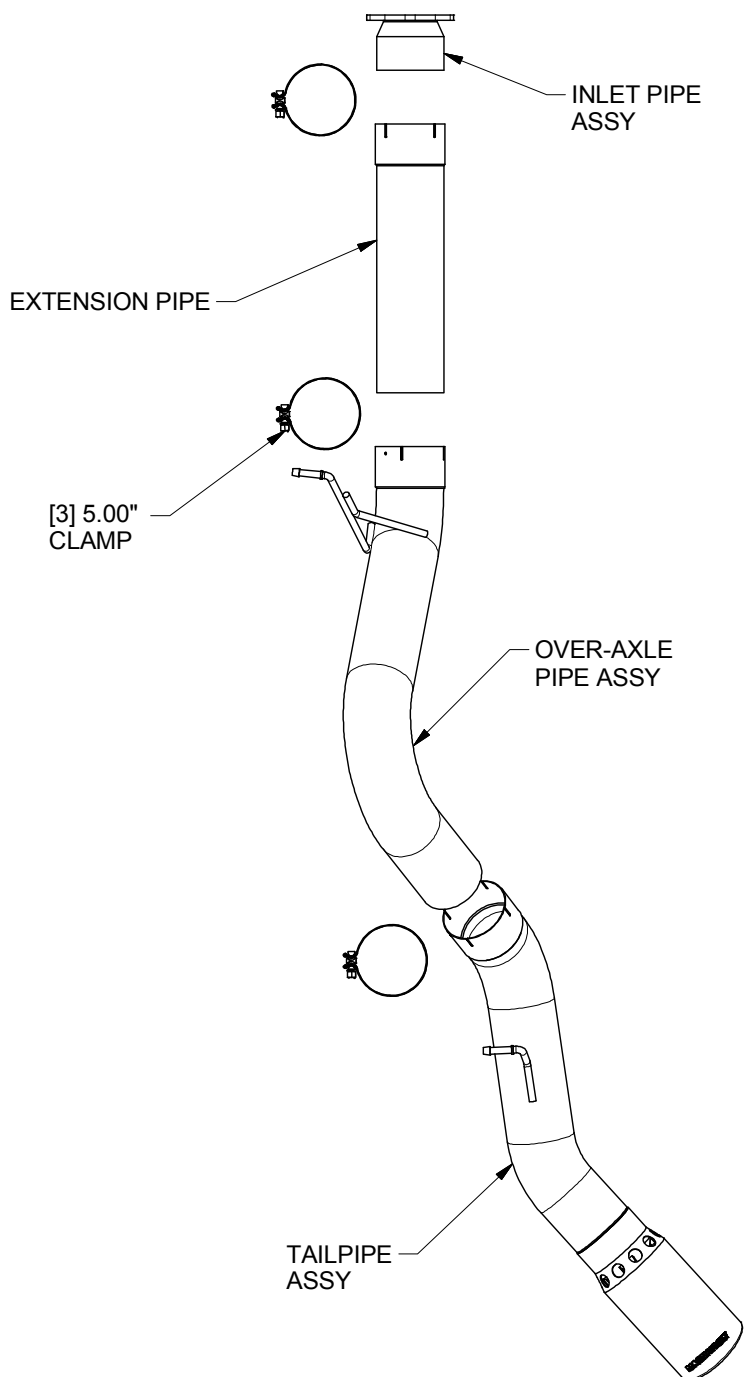

Warning: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

Step 1: To remove the OEM system, you will need to cut the tailpipe just behind the OEM muffler, you can then unbolt the muffler at the 3-bolt flange, and disengage the welded tailpipe hangers from the rubber insulators. Do not damage or discard the OEM gasket or rubber insulators, as they will be reused to mount the new system.

Step 2: Begin Installation of the new system by first attaching the Inlet Pipe Assembly to the outlet flange on the vehicle using the OEM gasket and the supplied fasteners (Leave all clamps and fasteners loose for final adjustment of the complete system). Next attach the Extension Pipe to the Inlet Assembly using the supplied 5.00\"

Step 3: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2\"

Step 4: Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks (Approximately 40ft-lbs). Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

**** Magnaflow Performance Exhaust recommends professional installation on all their products**