




INSTALLATION INSTRUCTIONS



2016 FORD EXPLORER 2.3L

PART NO. 19280

BILL OF MATERIALS:

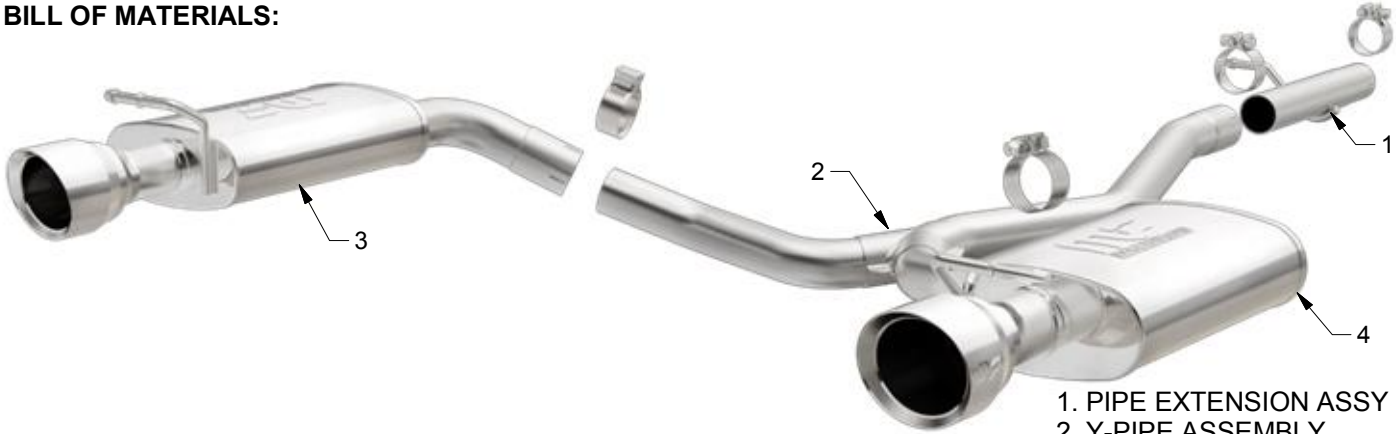

1. PIPE EXTENSION ASSY
2. Y-PIPE ASSEMBLY
3. MUFFLER ASSY D/S
4. MUFFLER ASSY P/S



WEAR SAFETY
GLASSES



READ INSTRUCTIONS
THOROUGHLY BEFORE
INSTALLING PRODUCT

SHOP SUPPLIES:



SPRAY LUBRICANT

To ease removal of existing exhaust components (especially on older vehicles) spray penetrating lubricant on all fasteners and hangers/insulators that will be loosened or removed and let soak before disassembly.

HARDWARE KIT:

- 1.[1] 2.25" Clamp
- 2.[3] 2.50" Clamp

MINIMUM REQUIRED TOOLS:



Sawzall or other
cutting tool



15mm



Hanger Tool
(Or Pry Bar)

MAGNAFLOW RECOMMENDS PROFESSIONAL INSTALLATION ON ALL THEIR PRODUCTS



WARNING: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

ATTENTION: Always install any supplied band or U-bolt clamps to the proper torque specifications of 40-45 ft-lbs for band clamps and 30-35 ft-lbs for U-bolt clamps. Over tightening will result in the clamp breaking and will NOT be warranted by MagnaFlow.

MAGNAFLOW: 22961 Arroyo Vista - Rancho Santa Margarita, CA 92688 | 1(800) 990-0905
Technical Support: 1(800) 959-9226 | Email: moreinfo@magnaflow.com

19280 9/21/15 REV 000


INSTALLATION INSTRUCTIONS



Step 1. To remove the OEM exhaust system you will need to cut the pipe 3.50" rearward of the stock resonator as shown. Deburr the freshly cut pipe. Working front to rear disengage all welded hangers from the rubber insulators and remove the system. Do not discard the or damage the rubber insulators as they will be used to mount the new system.



Step 2. Begin installation of the new system by fastening the Extension Pipe Assembly inlet to the resonator outlet pipe you just cut using the supplied 2.25" band clamp. Engage the welded hanger to the OEM rubber insulator. Leave all clamps loose for the final adjustment of the complete system.

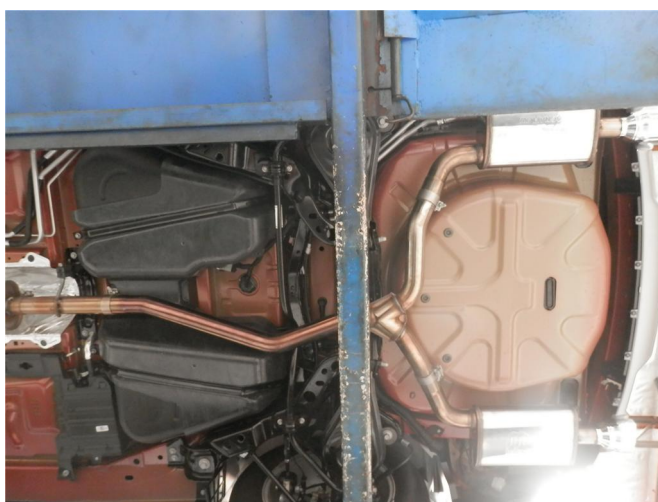

Step 3. Next loosely attach the Y-Pipe Assembly and both Muffler Assemblies using the supplied 2.50" clamps. Engage all welded hangers to the rubber insulators.



Step 4. Once a final position has been chosen for the new exhaust system, evenly tighten all clamps from front to rear using the torque specifications on page one of the instructions. Inspect all fasteners after 25-50 miles of operation and re-tighten if necessary.