




#1435 Ford 5.0 Tensioning Cover Kit

Revised 8-8-07

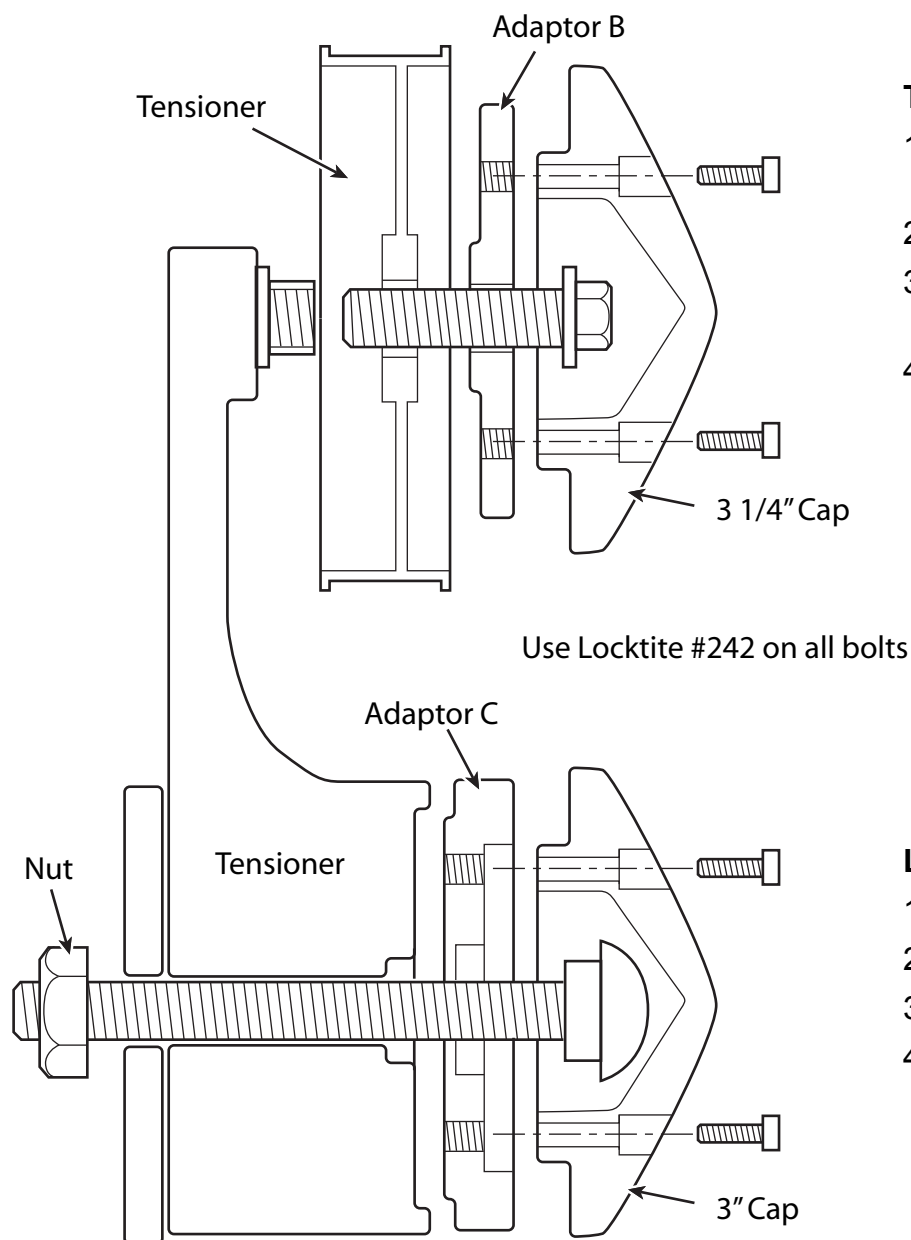

TOP COVER

1. Remove pulley bolt CAUTION: This is a left handed bolt. Remove by turning clockwise.
2. Remove bearing washer cover, do not reuse.
3. Replace with adapter "B" and tighten by turning counter clockwise.
4. Secure cover with (3) 8.32 x 5/8" socket screws.

LOWER COVER

1. Remove bolt from tensioner (right hand).
2. Slide bolt thru adaptor "C" and into square hole.
3. Tighten tensioner back onto bracket with nut.
4. Secure cover with (3) 8.32 x 5/8" socket screws.