




Ford Windage Tray P/N 22939

This Windage Tray is designed to fit Ford 351Cleveland/Modified engines and will need to be secured with Moroso Stud Kit P/N 38192.

See drawing below for reference.

1. After removing the oil pan, remove the #2 and #4 main cap bolts and replace with studs from Moroso Stud Kit P/N 38192. The order of assembly is Stud – Washer – 1/2" Nut.
2. Torque the new main cap studs to factory recommended specification.
3. Place Windage Tray on new studs as shown in diagram. Fasten using the nuts and washers supplied with the studs.
4. Check that all hardware is tight. Replace gasket and oil pan.

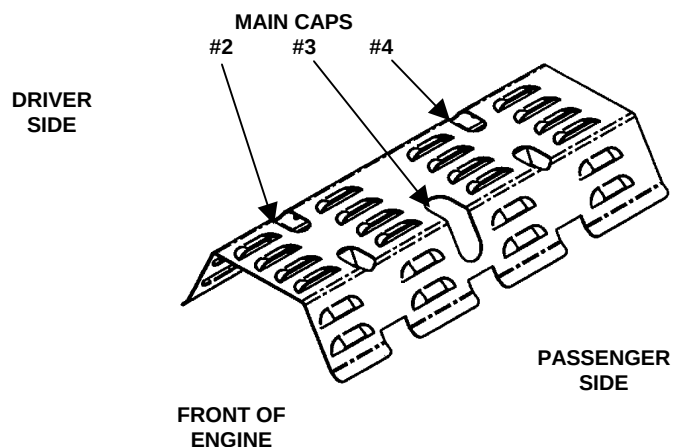

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

Rev.A
041305

22939INST




Ford Windage Tray P/N 22939

This Windage Tray is designed to fit Ford 351Cleveland/Modified engines and will need to be secured with Moroso Stud Kit P/N 38192.

See drawing below for reference.

1. After removing the oil pan, remove the #2 and #4 main cap bolts and replace with studs from Moroso Stud Kit P/N 38192. The order of assembly is Stud – Washer – 1/2" Nut.
2. Torque the new main cap studs to factory recommended specification.
3. Place Windage Tray on new studs as shown in diagram. Fasten using the nuts and washers supplied with the studs.
4. Check that all hardware is tight. Replace gasket and oil pan.

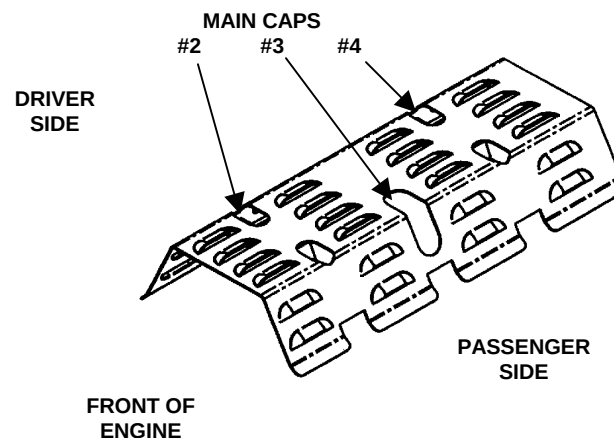

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

Rev.A
041305

22939INST