




**INSTALLATION INSTRUCTIONS
QUICK RELEASE HOOD PIN SET
P/N 39010**

PARTS LIST

- 2 3/8" dia. Quick Release Hood Pins with mounting hardware

1. Determine pin location and mount to stationary location using supplied locking nuts.
2. Drill 7/16" holes in the removable hood or panel to correspond with the stationary pins.
3. Place brass bushing into 7/16" hole.
4. Place fastener plates (with quick release mechanism) over brass bushings and mount to removable panel with pop rivets.
5. Adjust height of pin to suit tension required to hold removable panel or hood firmly in place.

NOTE: If hood pins are the only fasteners used, we highly recommend at least eight pins per hood of the type and location show below.

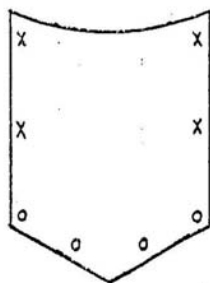

FRONT OF HOOD

X = P/N 39010
O = P/N 39020 or 39021

For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

VisitUsAtwww.moroso.com




**INSTALLATION INSTRUCTIONS
QUICK RELEASE HOOD PIN SET
P/N 39010**

PARTS LIST

- 2 3/8" dia. Quick Release Hood Pins with mounting hardware

1. Determine pin location and mount to stationary location using supplied locking nuts.
2. Drill 7/16" holes in the removable hood or panel to correspond with the stationary pins.
3. Place brass bushing into 7/16" hole.
4. Place fastener plates (with quick release mechanism) over brass bushings and mount to removable panel with pop rivets.
5. Adjust height of pin to suit tension required to hold removable panel or hood firmly in place.

NOTE: If hood pins are the only fasteners used, we highly recommend at least eight pins per hood of the type and location show below.

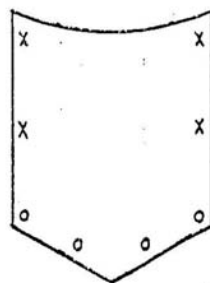

FRONT OF HOOD

X = P/N 39010
O = P/N 39020 or 39021

For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

VisitUsAtwww.moroso.com




**INSTALLATION INSTRUCTIONS
QUICK RELEASE HOOD PIN SET
P/N 39010**

PARTS LIST

- 2 3/8" dia. Quick Release Hood Pins with mounting hardware

1. Determine pin location and mount to stationary location using supplied locking nuts.
2. Drill 7/16" holes in the removable hood or panel to correspond with the stationary pins.
3. Place brass bushing into 7/16" hole.
4. Place fastener plates (with quick release mechanism) over brass bushings and mount to removable panel with pop rivets.
5. Adjust height of pin to suit tension required to hold removable panel or hood firmly in place.

NOTE: If hood pins are the only fasteners used, we highly recommend at least eight pins per hood of the type and location show below.

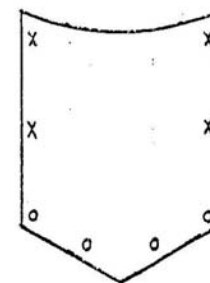

FRONT OF HOOD

X = P/N 39010
O = P/N 39020 or 39021

For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

VisitUsAtwww.moroso.com