




**P/N 62260 – WIRE CRIMPING TOOL
INSTALLATION INSTRUCTIONS**

To crimp spark plug wire terminals:

1. Cut wire to length (add 1" for stripping).
2. Lubricate wire with silicone and slide the proper nipples and boots over the wire. Be sure to wipe off excess silicone.
3. Strip the ends of wire ½" using the required stripping hole for your application.
4. Fold conductor over wire and insert terminal shank with conductor touching terminal. Keep stripped conductor out of area where clamp ears meet when crimped. (Illustration #1)
5. Place wire and terminal in proper crimping position of tool and crimp firmly. Illustration below demonstrates correct tool use for 90° terminals, and for 180° terminals.

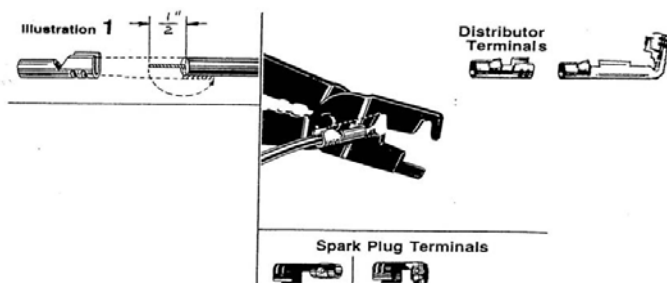

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

62260INST


REV.B
031811



**P/N 62260 – WIRE CRIMPING TOOL
INSTALLATION INSTRUCTIONS**

To crimp spark plug wire terminals:

1. Cut wire to length (add 1" for stripping).
2. Lubricate wire with silicone and slide the proper nipples and boots over the wire. Be sure to wipe off excess silicone.
3. Strip the ends of wire ½" using the required stripping hole for your application.
4. Fold conductor over wire and insert terminal shank with conductor touching terminal. Keep stripped conductor out of area where clamp ears meet when crimped. (Illustration #1)
5. Place wire and terminal in proper crimping position of tool and crimp firmly. Illustration below demonstrates correct tool use for 90° terminals, and for 180° terminals.

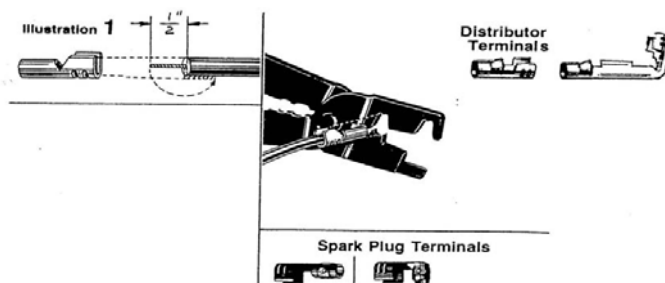

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

62260INST


REV.B
031811



**P/N 62260 – WIRE CRIMPING TOOL
INSTALLATION INSTRUCTIONS**

To crimp spark plug wire terminals:

1. Cut wire to length (add 1" for stripping).
2. Lubricate wire with silicone and slide the proper nipples and boots over the wire. Be sure to wipe off excess silicone.
3. Strip the ends of wire ½" using the required stripping hole for your application.
4. Fold conductor over wire and insert terminal shank with conductor touching terminal. Keep stripped conductor out of area where clamp ears meet when crimped. (Illustration #1)
5. Place wire and terminal in proper crimping position of tool and crimp firmly. Illustration below demonstrates correct tool use for 90° terminals, and for 180° terminals.

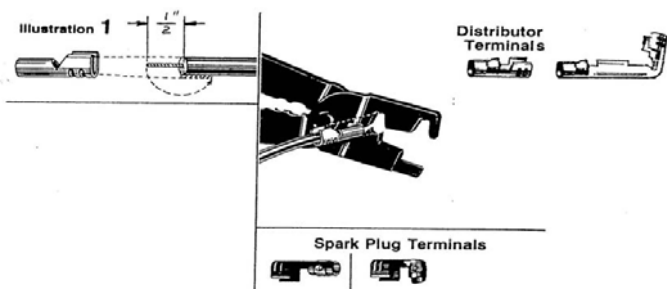

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

62260INST


REV.B
031811



**P/N 62260 – WIRE CRIMPING TOOL
INSTALLATION INSTRUCTIONS**

To crimp spark plug wire terminals:

1. Cut wire to length (add 1" for stripping).
2. Lubricate wire with silicone and slide the proper nipples and boots over the wire. Be sure to wipe off excess silicone.
3. Strip the ends of wire ½" using the required stripping hole for your application.
4. Fold conductor over wire and insert terminal shank with conductor touching terminal. Keep stripped conductor out of area where clamp ears meet when crimped. (Illustration #1)
5. Place wire and terminal in proper crimping position of tool and crimp firmly. Illustration below demonstrates correct tool use for 90° terminals, and for 180° terminals.

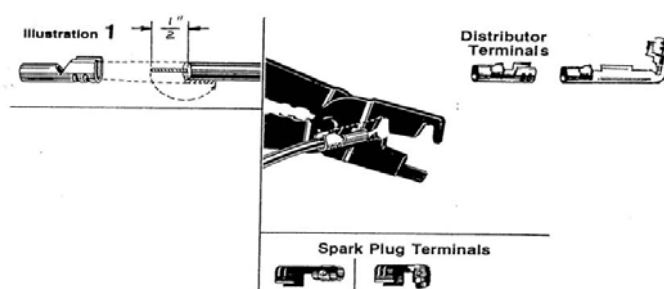

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

62260INST

REV.B
031811