




INSTRUCTIONS FOR P/N 63841 BBC ALTERNATOR DRIVE KIT

1. This kit is designed to work with Moroso P/N 63840 Alternator mount kit with older style Delco Remy Alternator. Use P/N 23528 Gilmer Drive Pulley if external oil pump is used. Comes complete with all spacers and hardware.
2. USE LOCTITE THREAD LOCKING COMPOUND ON BOLT THREADS.

PARTS LIST

- | | |
|------------------------------|-------------------------------|
| 1. 1/2 - 20 X 5-3/4 GR8 HHCS | 6. Aluminum Spacer (.905") |
| 2. Stepped Steel Washer | 7. Aluminum Spacer (.500") |
| 3. Aluminum Spacer (.250") | 8. Drive Hub |
| 4. Alternator Pulley | 9. 1/8" Sq. Key (Trim to fit) |
| 5. Aluminum Spacer (1.06") | |

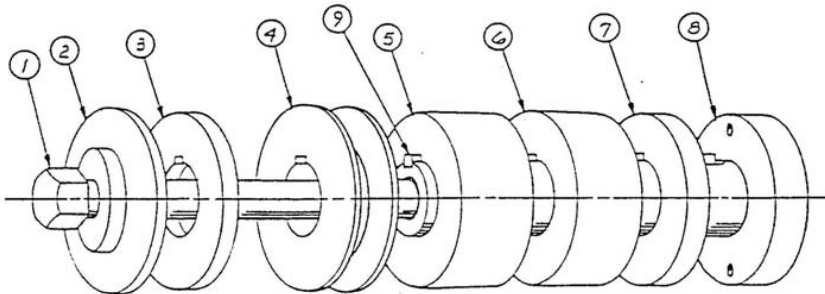

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am - 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906




INSTRUCTIONS FOR P/N 63841 BBC ALTERNATOR DRIVE KIT

1. This kit is designed to work with Moroso P/N 63840 Alternator mount kit with older style Delco Remy Alternator. Use P/N 23528 Gilmer Drive Pulley if external oil pump is used. Comes complete with all spacers and hardware.
2. USE LOCTITE THREAD LOCKING COMPOUND ON BOLT THREADS.

PARTS LIST

- | | |
|------------------------------|-------------------------------|
| 1. 1/2 - 20 X 5-3/4 GR8 HHCS | 6. Aluminum Spacer (.905") |
| 2. Stepped Steel Washer | 7. Aluminum Spacer (.500") |
| 3. Aluminum Spacer (.250") | 8. Drive Hub |
| 4. Alternator Pulley | 9. 1/8" Sq. Key (Trim to fit) |
| 5. Aluminum Spacer (1.06") | |

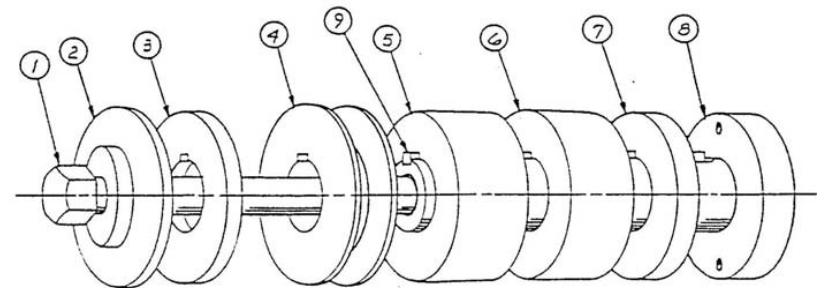

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am - 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906