




**Drive Kit - SBFord
P/N 63846**

Parts List

1 Spacer .350"	1 Split Lock Washer	1 Pulley, V-Belt	1 Lock Washer 7/16"
1 Spacer .500"	1 Drive Gear 16T	1 Woodruff Key	1 Stepped Steel Washer
2 Spacer .905"	2 Belt Guides	1 Mandrel	1 HHCS 7/16 x 7.5"
1 Drive Hub	1 SBF, Drive Spacer	4 Socket Head Cap Screw	

This Drive Kit is designed to work with a Moroso Dry Sump Pump and Moroso Vacuum Pump mounted with a Moroso part #63911 Ford Vacuum Pump, Mounting Bracket, #63810 Alt. Mounting Bracket and #64810 Alt. Pulley. The diagram below shows one of the many arrangements of the Drive Kit.

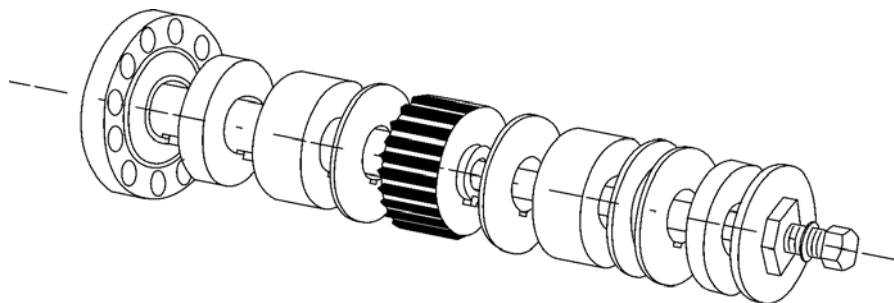

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 8:30am – 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • FAX (203) 453-6906

Visit Us At www.moroso.com

Rev.A
040103

63846INST




**Drive Kit - SBFord
P/N 63846**

Parts List

1 Spacer .350"	1 Split Lock Washer	1 Pulley, V-Belt	1 Lock Washer 7/16"
1 Spacer .500"	1 Drive Gear 16T	1 Woodruff Key	1 Stepped Steel Washer
2 Spacer .905"	2 Belt Guides	1 Mandrel	1 HHCS 7/16 x 7.5"
1 Drive Hub	1 SBF, Drive Spacer	4 Socket Head Cap Screw	

This Drive Kit is designed to work with a Moroso Dry Sump Pump and Moroso Vacuum Pump mounted with a Moroso part #63911 Ford Vacuum Pump, Mounting Bracket, #63810 Alt. Mounting Bracket and #64810 Alt. Pulley. The diagram below shows one of the many arrangements of the Drive kit.

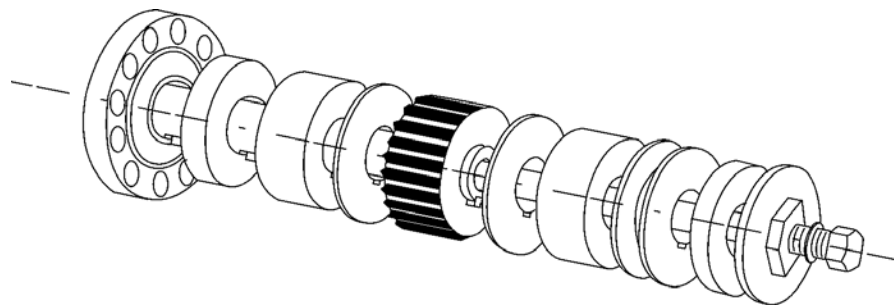

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 8:30am – 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • FAX (203) 453-6906

Visit Us At www.moroso.com

Rev.A
040103

63846INST