




INSTALLATION INSTRUCTIONS P/N 64031

PARTS LIST

- 1 .120" Aluminum Shim
- 1 .050" Aluminum Shim
- 1 .070" Aluminum Shim

INSTALLATION

This crank pulley shim kit has been designed to fit both Small Block and Big Block Chevrolet engines. To use this kit on a Big Block Chevy, cut the tabs off (see below) and grind or file the radius smooth.

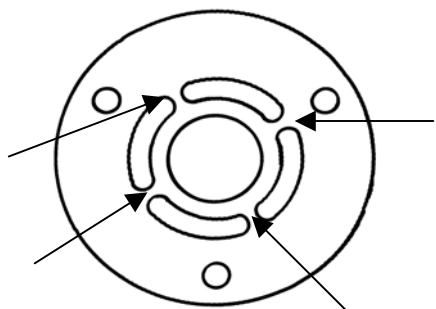

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

64031INST

REV.B
061311




INSTALLATION INSTRUCTIONS P/N 64031

PARTS LIST

- 1 .120" Aluminum Shim
- 1 .050" Aluminum Shim
- 1 .070" Aluminum Shim

INSTALLATION

This crank pulley shim kit has been designed to fit both Small Block and Big Block Chevrolet engines. To use this kit on a Big Block Chevy, cut the tabs off (see below) and grind or file the radius smooth.

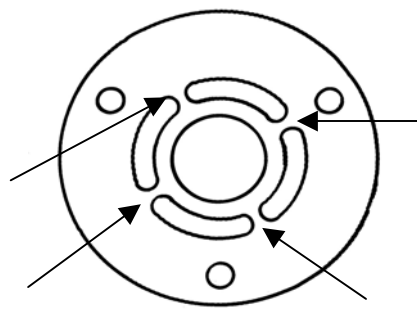

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

64031INST

REV.B
061311




INSTALLATION INSTRUCTIONS P/N 64031

PARTS LIST

- 1 .120" Aluminum Shim
- 1 .050" Aluminum Shim
- 1 .070" Aluminum Shim

INSTALLATION

This crank pulley shim kit has been designed to fit both Small Block and Big Block Chevrolet engines. To use this kit on a Big Block Chevy, cut the tabs off (see below) and grind or file the radius smooth.

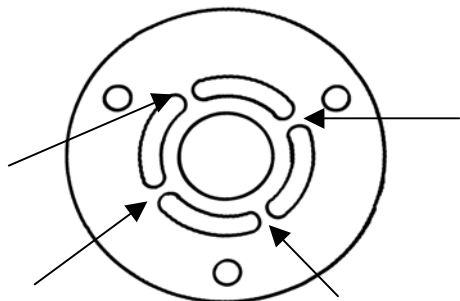

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

64031INST

REV.B
061311




INSTALLATION INSTRUCTIONS P/N 64031

PARTS LIST

- 1 .120" Aluminum Shim
- 1 .050" Aluminum Shim
- 1 .070" Aluminum Shim

INSTALLATION

This crank pulley shim kit has been designed to fit both Small Block and Big Block Chevrolet engines. To use this kit on a Big Block Chevy, cut the tabs off (see below) and grind or file the radius smooth.

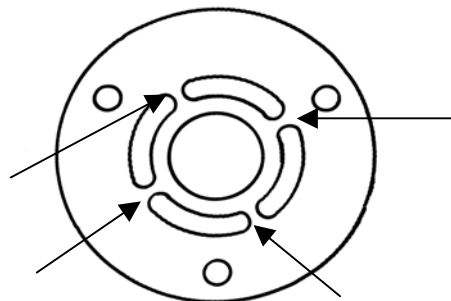

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

64031INST

REV.B
061311