




THROTTLE RETURN SPRING KIT
18° SBC Cylinder Heads, Manifold Mount, 5-7/16" Tall
P/N 64922

To install, first remove the two left front manifold bolts. The bracket will match up to the existing bolt holes in the intake manifold. Re-install bolts in manifold and tighten to proper torque. At carburetor side of installation attach small spring mounting bracket and spacers as shown below. It is recommended that anti-seeze be used on inside diameter of small spring bracket to ensure smooth operation. Clip extension springs to brackets as shown. After springs are installed check throttle action for binds. Throttle should return to closed position sharply and smoothly.

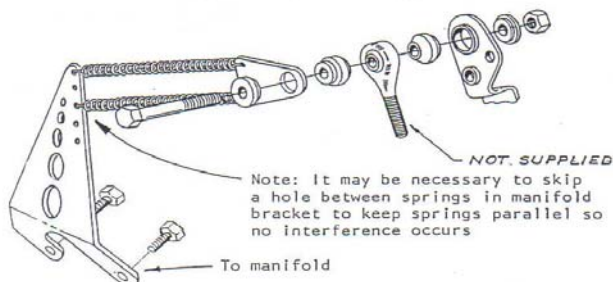

For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com


64922INST

Rev.B
080811



THROTTLE RETURN SPRING KIT
18° SBC Cylinder Heads, Manifold Mount, 5-7/16" Tall
P/N 64922

To install, first remove the two left front manifold bolts. The bracket will match up to the existing bolt holes in the intake manifold. Re-install bolts in manifold and tighten to proper torque. At carburetor side of installation attach small spring mounting bracket and spacers as shown below. It is recommended that anti-seeze be used on inside diameter of small spring bracket to ensure smooth operation. Clip extension springs to brackets as shown. After springs are installed check throttle action for binds. Throttle should return to closed position sharply and smoothly.

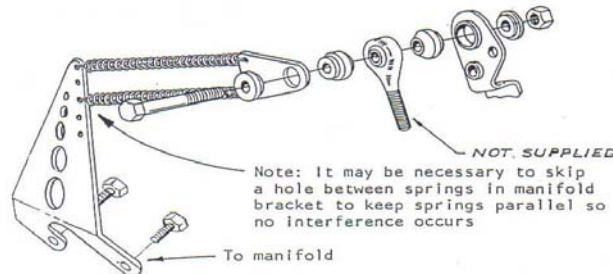

For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com


64922INST

Rev.B
080811



THROTTLE RETURN SPRING KIT
18° SBC Cylinder Heads, Manifold Mount, 5-7/16" Tall
P/N 64922

To install, first remove the two left front manifold bolts. The bracket will match up to the existing bolt holes in the intake manifold. Re-install bolts in manifold and tighten to proper torque. At carburetor side of installation attach small spring mounting bracket and spacers as shown below. It is recommended that anti-seeze be used on inside diameter of small spring bracket to ensure smooth operation. Clip extension springs to brackets as shown. After springs are installed check throttle action for binds. Throttle should return to closed position sharply and smoothly.

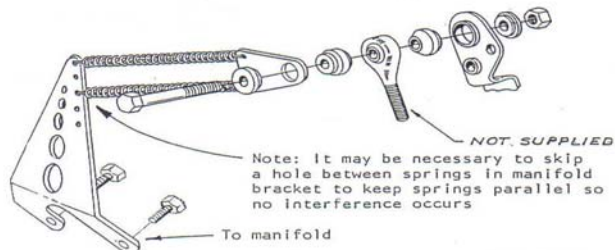

For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com


64922INST

Rev.B
080811



THROTTLE RETURN SPRING KIT
18° SBC Cylinder Heads, Manifold Mount, 5-7/16" Tall
P/N 64922

To install, first remove the two left front manifold bolts. The bracket will match up to the existing bolt holes in the intake manifold. Re-install bolts in manifold and tighten to proper torque. At carburetor side of installation attach small spring mounting bracket and spacers as shown below. It is recommended that anti-seeze be used on inside diameter of small spring bracket to ensure smooth operation. Clip extension springs to brackets as shown. After springs are installed check throttle action for binds. Throttle should return to closed position sharply and smoothly.

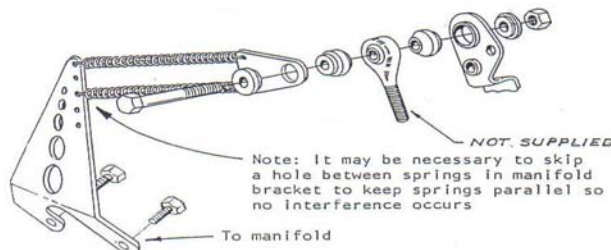

For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

64922INST

Rev.B
080811