




**TALL THROTTLE RETURN SPRING KIT
P/N 64928
INSTALLATION INSTRUCTIONS**

FOR USE WITH TALL MANIFOLDS & CARB SPACERS

To install, first remove the two left front manifold bolts at the water passage. Large spring mounting bracket will straddle this water passage and match up to the existing bolt holes in the intake manifold. Re-install existing bolts in manifold and tighten to proper torque. At carburetor side of installation attach small spring mounting bracket and spacers as shown below. It is recommended that anti-seeze be used on inside diameter of small spring bracket to ensure smooth operation. Clip extension springs to brackets as shown. After springs are installed check throttle action for binds. Throttle should return to closed position sharply and smoothly. CE rod end P/N C6003 is recommended for this application.

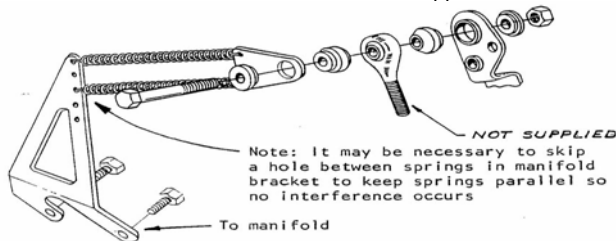

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

64928INST


Rev. B
092611



**TALL THROTTLE RETURN SPRING KIT
P/N 64928
INSTALLATION INSTRUCTIONS**

FOR USE WITH TALL MANIFOLDS & CARB SPACERS

To install, first remove the two left front manifold bolts at the water passage. Large spring mounting bracket will straddle this water passage and match up to the existing bolt holes in the intake manifold. Re-install existing bolts in manifold and tighten to proper torque. At carburetor side of installation attach small spring mounting bracket and spacers as shown below. It is recommended that anti-seeze be used on inside diameter of small spring bracket to ensure smooth operation. Clip extension springs to brackets as shown. After springs are installed check throttle action for binds. Throttle should return to closed position sharply and smoothly. CE rod end P/N C6003 is recommended for this application.

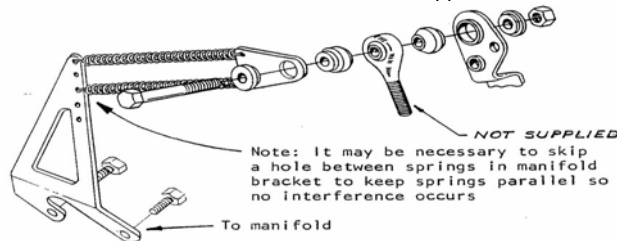

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

64928INST


Rev.B
092611



**TALL THROTTLE RETURN SPRING KIT
P/N 64928
INSTALLATION INSTRUCTIONS**

FOR USE WITH TALL MANIFOLDS & CARB SPACERS

To install, first remove the two left front manifold bolts at the water passage. Large spring mounting bracket will straddle this water passage and match up to the existing bolt holes in the intake manifold. Re-install existing bolts in manifold and tighten to proper torque. At carburetor side of installation attach small spring mounting bracket and spacers as shown below. It is recommended that anti-seeze be used on inside diameter of small spring bracket to ensure smooth operation. Clip extension springs to brackets as shown. After springs are installed check throttle action for binds. Throttle should return to closed position sharply and smoothly. CE rod end P/N C6003 is recommended for this application.

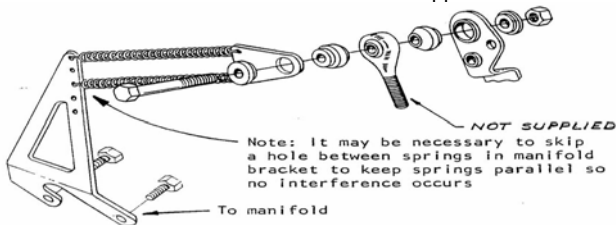

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

64928INST


Rev. B
092611



**TALL THROTTLE RETURN SPRING KIT
P/N 64928
INSTALLATION INSTRUCTIONS**

FOR USE WITH TALL MANIFOLDS & CARB SPACERS

To install, first remove the two left front manifold bolts at the water passage. Large spring mounting bracket will straddle this water passage and match up to the existing bolt holes in the intake manifold. Re-install existing bolts in manifold and tighten to proper torque. At carburetor side of installation attach small spring mounting bracket and spacers as shown below. It is recommended that anti-seeze be used on inside diameter of small spring bracket to ensure smooth operation. Clip extension springs to brackets as shown. After springs are installed check throttle action for binds. Throttle should return to closed position sharply and smoothly. CE rod end P/N C6003 is recommended for this application.

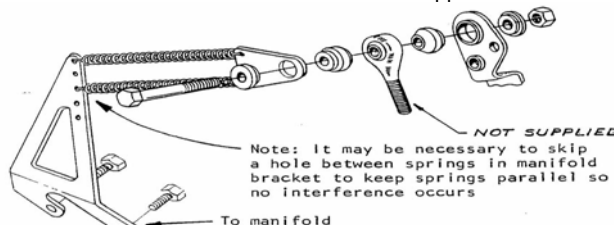

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

64928INST

Rev. B
092611