



## INSTALLATION INSTRUCTIONS

P/N 65045 and 65050

### PARTS LIST: #65045

- 1 MOUNTING PLATE
- 1 CABLE CLIP
- 2 10-32 X 1/2" HEX HEAD CAP SCREW
- 2 10-32 LOCKNUT
- 1 1/4" BORE WITH 10-32 THREAD ROD END
- 1 1/4"-20 X 1 3/8" HEX HEAD CAP SCREW
- 1 1/4"-20 LOCKNUT

### PARTS LIST: 65050

- 1 MOUNTING PLATE
- 1 CABLE CLIP
- 2 10-32 X 1/2" HEX HEAD CAP SCREW
- 2 10-32 LOCKNUT
- 1 CABLE PIVOT
- 1 CLIP
- 1 1/4"-20 LOCKNUT

These kits are designed to work with Throttle Return Spring kits part # 64925, #64926 and #64927.

Diagram #1. - Installation of Part No. 65045 Series 30 Morse Cable to Holley Carb




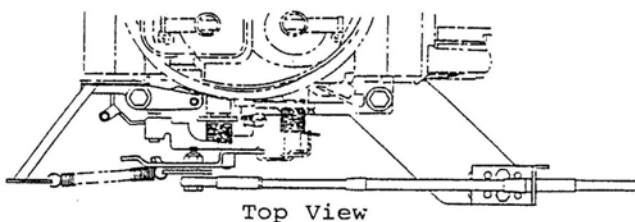


Diagram #2 - Installation of Part No. 65050 GM Throttle Cable to Holley Carb

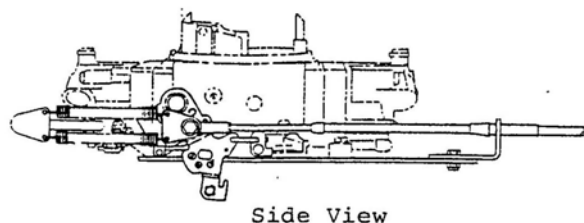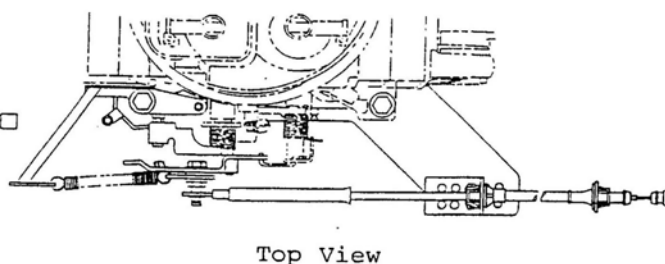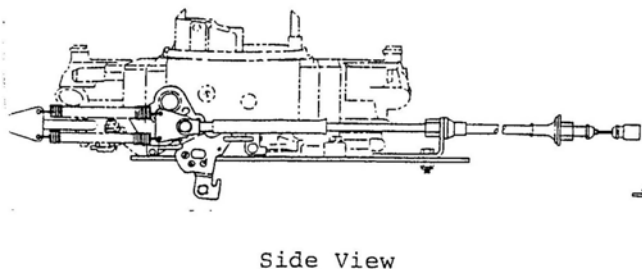

**For Technical Assistance, Call Moroso's Tech Line at  
(203) 458-0542, 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC  
80 CARTER DR • GUILFORD, CT 06437-2116  
Phone: (203) 453-6571 • Fax: (203) 453-6906