




**Valvetrain Oil Deflector
P/N 67700
Small Block Chevy
and 289, 302, 351W Ford**

This product is designed to work with tall valve covers only. Interference with components and oiling problems could result if used with stock height valve covers.

INSTALLATION INSTRUCTIONS

Remove existing allen set screws from polylock in appropriate locations for your engine, (see diagram below). Replace with longer allen set screws provided. Place a jam nut and washer on the new allen set screws. Set the Oil Deflector on washer and jam nut and check for any interference. Tighten with a washer and locknut as shown in diagram.

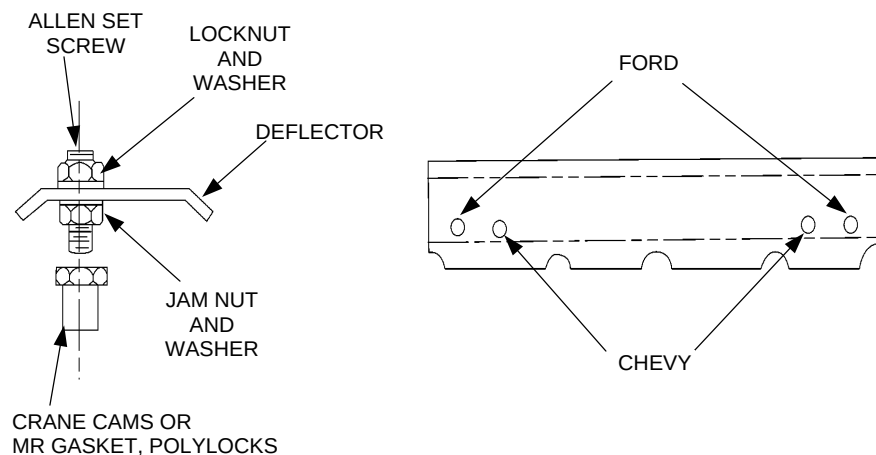

NOTE: Remove vinyl coating before installation.

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

**MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906**




**Valvetrain Oil Deflector
P/N 67700
Small Block Chevy
and 289, 302, 351W Ford**

This product is designed to work with tall valve covers only. Interference with components and oiling problems could result if used with stock height valve covers.

INSTALLATION INSTRUCTIONS

Remove existing allen set screws from polylock in appropriate locations for your engine, (see diagram below). Replace with longer allen set screws provided. Place a jam nut and washer on the new allen set screws. Set the Oil Deflector on washer and jam nut and check for any interference. Tighten with a washer and locknut as shown in diagram.

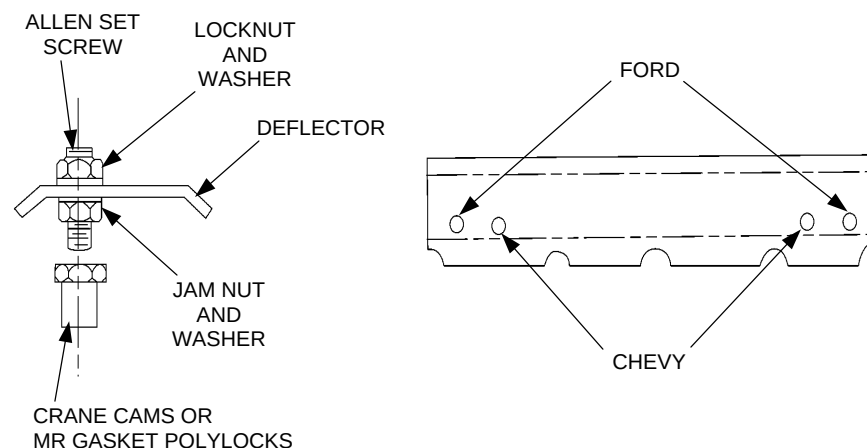

NOTE: Remove vinyl coating before installation

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

**MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906**